



INSTALLATION

DRIVING LIGHT BAR MOUNTING BRACKET 4006

FITS: 800 DRIFTER, SUZUKI MARAUDER 800, VOLUSIA 800, INTRUDER 650, AND INTRUDER 800

PART#	INCLUDED
404006	1 Light Bar Mounting Plate — Stainless Steel
904006	1 Light Bar Mounting Kit Including:
201128	2 M8 x 1.25 x 16mm Socket Head Cap Screw
201222	4 M8 Flat Washer — Stainless
201129	2 M8 x 1.25 x 23.5 Internal Thread Hex Spacer
201137	2 M6 X 1.0 X 12mm Socket Head Cap Screw
201138	4 M6 Flat Washer — Stainless
201139	2 M6 X 1.0 X .394 O.D. X .689 Long Internal Thread Hex Spacer
304006	1 Installation Instruction

TOOLS SUGGESTED

Set of Standard and Metric Combination Wrenches and a Set of Standard and Metric Allen Wrenches and a Factory Service Manual for wiring reference.

NOTE

We recommend using Kuryakyn P/N 2328, Universal Wiring and Relay Kit, to manually operate the running lights. It is important to use Loctite on all hardware when installing new parts.

PROCEDURE

STEP 1 Add the two M6 or M8 Hex Spacers with flat washers to the bottom of the headlight bolts under the lower triple tree.

STEP 2 Align the holes in the mounting plate with the Hex Spacers and fasten with the M6 or M8 Socket Head Cap Screws and flat washers.

STEP 3 Position the new light bar on to the mounting plate and fasten using the two 1/4"-20 X .40" Button Head Cap Screws supplied with the light bar.

STEP 4 Route the wires under the mounting plate and up into the rear of the headlight.

STEP 5 Remove the three Phillips screws on the head light bezel. Carefully remove the bezel and bulb.

STEP 6 Connect the turn signal wires to the corresponding O.E.M. wires inside of the headlight. (Refer to Factory Service Manual.) We recommend connecting both of the power leads to from the driving lights to Kuryakyn P/N 2328, Universal Wiring and Relay Kit, or an equal quality relay switch.

WIRING COLOR CODES AND INFORMATION

L.E.D. Auxiliary Running Lights and Turn Signals

COLOR	FUNCTION
Red	"Low" running light
White	"High" turn signal
Black	Ground

Silver Bullet Driving Lights

These halogen lights are grounded by their connection to the chassis. The single black wire from each light is the power wire.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES:
Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for HD, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2004 Kuryakyn USA™ All Rights reserved.

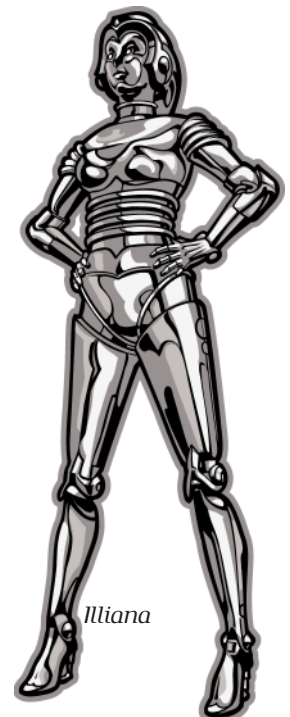

kuryakyn.com

-cont.-

STEP 7 Test for function of ALL the lights before re-assembling the headlight and bezel. Reassemble the headlight when all lights are functioning properly.

Ride On!

Kuryakyn™

PAGE

2