



INSTALLATION



GL1800 SUPER LIZARD STARTER KIT 5026

FITS: ALL '01-UP GL1800 MODELS

PARTS INCLUDED

- 6 Super Lizard Lights
- 6 Super Lizard Replacement Adhesives
- 1 Controllor
- 2 Light Mounts
- 4 Alcohol Pads
- 1 102" Extension
- 4 6" Extensions
- 2 12" Extensions
- 1 18" Extension
- 2 Y Connectors
- 4 Double Female Connectors
- 4 Double Male Connectors
- 2 Dielectric Grease Packets
- 1 Installation Instruction

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Socket Set with Extensions and Ratchet, Screwdrivers

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

CAUTIONS

- 1 Do not operate more than 16 Seven Color Lizard Lights on one controllor.
- 2 Seven Color Lizard Lights are designed for display or parade use. Check local regulations regarding the use and placement of colored lights when the vehicle is operated on public streets.
- 3 To prevent corrosion, apply dielectric grease to all connections (including plugs).
- 4 Do not affix Seven Color Lizard Lights to hot engine or exhaust components.
- 5 The mounting surface must be perfectly clean for Lizard Lights to properly adhere. Remove wax, dirt, dust, or any oily film with the alcohol pads provided before application.

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



kuryakyn.com

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

STEP 2 Use your imagination! Determine what areas or features of the bike you wish to highlight. Mark your desired locations with small pieces of masking tape. This will allow you to determine if the supplied leads will be suitable for your plan. If you have a bike with a rubber mounted engine, keep engine movement in mind. Do not mount Super Lizard Lights where the engine or any related components might contact the lights or wiring during normal operation. Try to place plug connections in locations that will ease removal of the motorcycle's components as needed (i.e. fuel tank, horn, etc.). This will ease future service procedures.

STEP 3 Assemble the wiring and lights "on the bench" according to your plan. Use dielectric grease on all connections. Make sure the red wire of each extension lead lines up with the red wire on Lizard Light. The controller has two output leads; you may use either one or both, DO NOT make a complete "loop" with the layout.

STEP 4 Remove the four bolts that secure the passenger handles to the seat. Remove the handles and the seat; set them aside to be reinstalled.

STEP 5 Remove both the left battery cover and right side cover (PIC 1) by gently pulling on the panel to release.

STEP 6 Carefully remove the clutch side fairing molding trim piece shown in PIC 2; starting at the bottom of the molding and working your way up pulling out to disengage the tabs.

STEP 7 Open the clutch side fairing pocket lid and remove the four (4) trim clips by pushing in on the center and then pulling the clips out. Set the clips aside, they will be used for reinstallation later (PIC 3).

STEP 8 Remove the fairing pocket by pulling straight up and out.

STEP 9 Remove the three (3) bolts from the fairing as shown in PIC 4; set them aside, they will be used for reinstallation.

STEP 10 Remove the rubber grommet from the bottom of the fairing pocket and set aside. (PIC 3)

STEP 11 Disconnect the fuse holder on the red power wire from the controller and insert it through the hole at the bottom of the fairing pocket that was removed in Step 8.

STEP 12 Carefully insert the remaining wires one at a time from the control switch through the hole in the fairing pocket. Now the controller is inside the fairing pocket.

STEP 13 Connect the 102" extension to one of the leads from the controller. Make sure that the red wire from the extension lines up with the red wire from the controller lead.

Kuryakyn®


PIC. 1



PIC. 2



PIC. 3

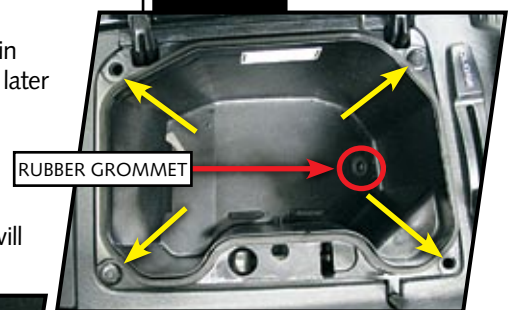

PIC. 4



PAGE

2

STEP 14 Run the power wires (red power w/in-line fuse and black ground) and the 102" extension down the outer edge of the fairing [PIC 5](#)

NOTE It may be helpful to tape the wires together every 4-6" using electrical tape

STEP 15 Gently pull the lower portion of the fairing our and tuck the wires behind the panel

ATTENTION! Secure all wiring away from moving parts, pinch point or extreme heat. Kuryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

STEP 16 Tuck the wires up underneath the fairing as far as possible ([PIC 6](#))

STEP 17 Run the wires along the motorcycle frame as shown in [PIC 7](#)

NOTE Once the 102" extension is run to the back of the motorcycle, use the included y-connectors and extensions to mount the lights were you desire at the rear of the motorcycle.

STEP 18 To add lights to the FRONT portion of your motorcycle, connect a 18" extension to the remaining open lead from the controller. This will make routing the lead through the fairing much easier.

STEP 19 Route the wire through the inside of the fairing so that it exits in to the radiator vent area ([PIC 8](#)) or the front cowling of the motorcycle ([PIC 9](#))

STEP 20 Use the supplied extensions and y-connectors to mount the lights when you desire at the front of the motorcycle.

NOTE The 2 included light mounts are for use inside each of the radiator vents. When attached to the top or bottom of the radiator shrouding (with a light installed), the light will shine illuminating the radiator vent.

STEP 21 Cut a slit/notch in the rubber grommet removed in STEP 10.

STEP 22 Reinstall the grommet in the bottom of the fairing pocket, placing the wires in the slit/notch in the grommet. ([PIC 10](#))

STEP 23 Reinstall the fairing pocket, make sure that the wires are tucked underneath the fairing pocket and are not being pinched. Secure with the four trim clips removed in STEP 7.

STEP 24 Secure the clutch-side front fairing using the bolts removed in STEP 9.

STEP 25 Carefully install the fairing trim starting at the top, inserting the front tab and working your way down the molding, being careful not to break the tabs.

STEP 26 Reinstall the side cover.

STEP 27 Choose a mounting location inside the fairing pocket to mount the control switch. Clean the area with an alcohol cleaning pad and allow the area to thoroughly dry.

STEP 28 Using the back of your fingernail, rub the backing of the adhesive pad to activate the catalyst, and then remove the backing.

STEP 29 Press the switch into place and hold for one (1) minute. Full bonding strength will occur in 24 hours.


STEP 30 Hook the power leads to the battery, red to positive, and black to negative; secure any remaining wires out of the way using an included cable tie.

Kuryakyn®

PIC. 5



PIC. 6

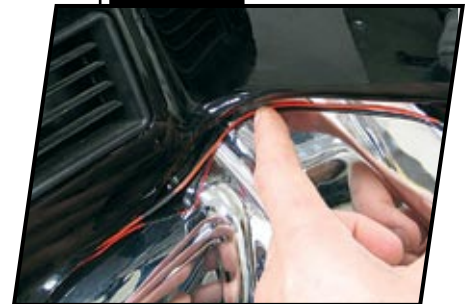

PIC. 7



PAGE

3

-cont.-

STEP 31 Reinstall the seat and passenger handles using the screws removed in STEP 4.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

OPERATION

The controller has a rheostat, a toggle switch, and a push button.

- Use the toggle switch to select "STEADY ON" or "FLASH" modes or to turn the lights "OFF".
- The push button allows the user to select the color they wish to illuminate. There are eight possibilities. The first seven options select an individual color. The eighth option called "PAINT MODE" will continuously cycles the lights through all seven colors, indicated by the white-colored light to initiate the Paint Mode.
- The rheostat varies the flash rate when illuminating a specific color in "FLASH" mode or varies the rate at which the lights cycle through all seven colors if "PAINT MODE" is selected.

Ride On!

Kuryakyn®

PIC. 8



PIC. 9



PIC. 10



PAGE

4