



## AIRMASTER™ REAR AIRFOIL 1384

**FITS: ALL '01-UP GL 1800**

### PARTS INCLUDED

- 1 Rear Airfoil
- 1 Hardware Kit Including:
  - 2 Well Nuts
  - 2 1/4-20 x 1" Pan Head Screws
  - 2 1/4" Flat Washers
- 1 Adhesive Backed Foam Stripping
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Phillips screwdriver, glass cleaner, 15/32" drill bit, power drill, center punch.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**


### PROCEDURE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**ATTENTION!** Do not remove the protective film from the airfoil until the end of the installation or the airfoil may be scratched during the installation process.

**STEP 2** Open the trunk and remove the two screws that secure the backrest as shown in PIC. 1. These screws will be re-used.

**-cont.-**

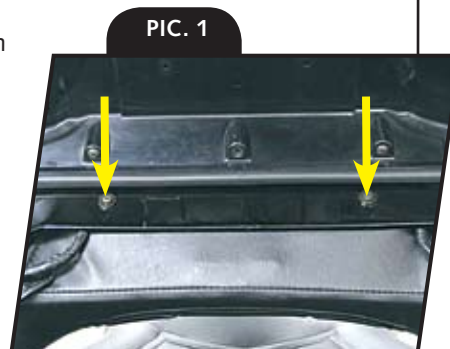

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**STEP 3** Pull up on the backrest to remove it from the motorcycle.

**NOTE:** On Models with seat heaters, it will be necessary to unplug the harness before removing the backrest.

**STEP 4** Clean the area shown in PIC. 2 with window cleaner and make sure that any wax build up is removed; allow the area to dry.

**STEP 5** Test fit the foam along the upper portion of the trunk and bend it to follow the contours of the as shown in PIC. 2.

**NOTE:** The edge of the foam should be about a 1/8" below the top edge of the trunk as shown in PIC. 3.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50° F. Do not attempt this installation in temperatures less than 50° F.

**STEP 6** Remove the adhesive backing from the foam and install the foam on the trunk.

**STEP 7** Hold the airfoil in place, so that the holes in the airfoil will be in the center of the flat spots shown in PIC. 4, and the edges of the of the airfoil are centered on the backrest as shown in PIC. 5.

**STEP 8** Mark the center of the holes of the airfoil on the trunk with a center punch.

**STEP 9** Remove the windscreen, and check behind the area where the holes will be drilled to ensure that no wires will be damaged when drilling.

**STEP 10** Drill a pilot hole using a 1/4" drill bit where the mark was made in STEP 8.

**STEP 11** Re-check to make sure that no wires will be damaged and drill a larger hole using a 15/32" drill bit.

**STEP 12** Push the well nuts in the holes.

**STEP 13** Remove the plastic protective film from the airfoil and install, secure using the screws and washers from the hardware kit.




**STEP 14** Reinstall the backrest (be sure to plug in the harness for the heated seats on equipped Models) and secure using the two screws that were removed in STEP 2.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

**NOTE:** This airfoil is designed to be quick release by removing the screws that secure the backrest and the screws securing the airfoil.

**WARNING!** DO NOT CLEAN IN HOT SUN OR HIGH TEMPERATURE. POWDERED, ABRASIVE OR ALKALINE CLEANSER WILL DAMAGE THE WINDSHIELD. NEVER SCRAPE THE WINDSHIELD WITH A RAZOR BLADE OR OTHER SHARP INSTRUMENT.

**Kuryakyn**<sup>®</sup>

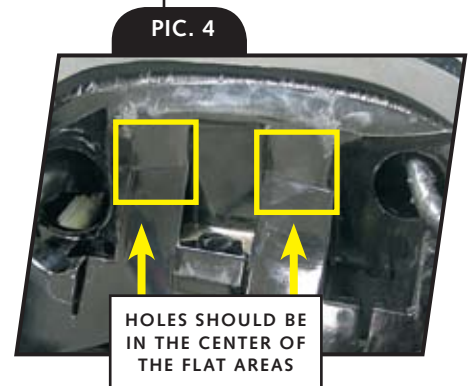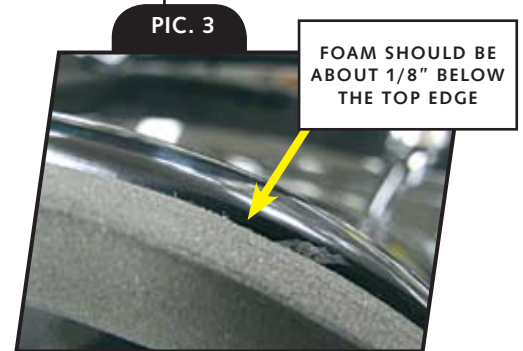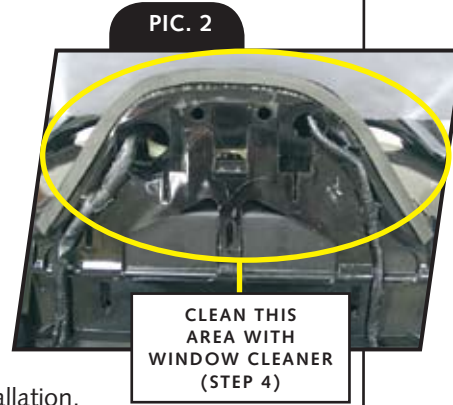

PAGE

2

-cont.-


**WARNING!** DO NOT USE BENZENE, PAINT THINNER, GASOLINE OR ANY OTHER TYPE OF HARSH CLEANER ON THE WINDSHIELD. DO NOT USE AMMONIA BASED SOLVENTS OR PETROLEUM DISTILLATES. DOING SO WILL DAMAGE THE WINDSHIELD SURFACE.

**WARNING!** DO NOT USE HARSH CHEMICALS INCLUDING RAIN SHEETING PRODUCTS ON MOTORCYCLE WINDSHIELDS. THEY CAN CAUSE A DULLING OR HAZING. TO OBTAIN A PROPER HIGH-END POLISH, PLEASE USE A QUALITY PROTECTOR AND POLISH SUCH AS PLEXUS® OR NOVUS® BRAND CLEANERS.

**NOTE:** Sunlight reflections off the inside curvature of the windshield can, at certain times of the day, cause extreme heat build-up on motorcycle instruments. Exercise care in parking. Park facing the sun, place an opaque object over the instruments, or adjust the windshield to avoid reflections.

*Ride On!*

**Kuryakyn®**

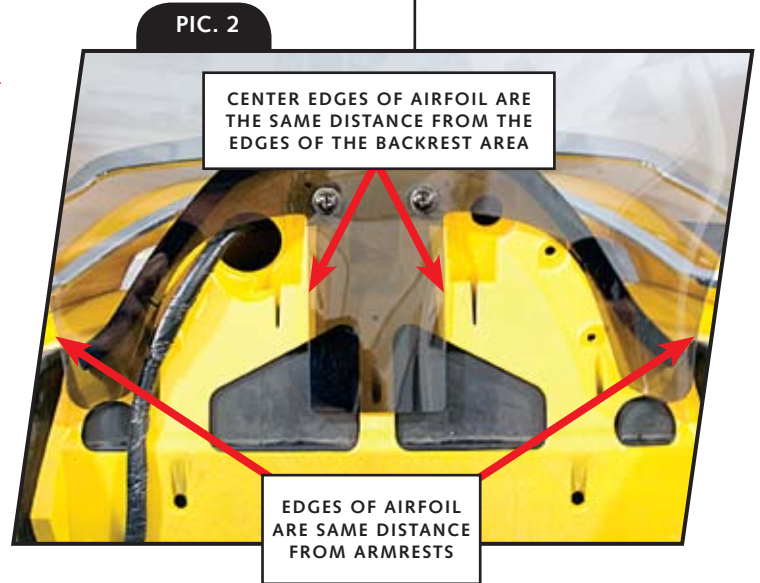

PAGE  
**3**