



SKULL MIRROR 1450

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.



FITS: UNIVERSAL APPLICATIONS

PART #	INCLUDED	
601450	2 Skull Mirrors Pre Assembled	
	2 Skull Mirror Lens Assembly	
	2 Skull Head	
	4 Knurled Treetops	
	2 Mirror Clamp	
	2 1/4"-20 Ball End Hex Screw	
	6 8-32 x 5/16" HHCS Grade 5	
	4 1/4"-28 x 1/2" BSCS	
	2 8-32 x 1/4" Set Screw	
	2 1/4"-20 Hex Nut	
	2 Mirror Stem	
	901431	1 Hardware Kit Including:
		2 5/16"-18 x 1-1/2" SHCS
2 5/16"-18 x 2" SHCS		
2 5/16" Split Lock Washer		
2 5/16" Internal Tooth Lock Washer		
2 Double Ended Threaded Stud 2-1/2" Long		
301450	1 2.5mm Allen Wrench	
	1 Installation Instructions	

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!



PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

NOTES

- You may choose to use medium strength thread lock on the supplied fasteners prior to installation.
- To adjust the tension on the mirror pivot ball joint first loosen the set screw shown in PIC.1 then tighten or loosen the exposed two fasteners by the mounting stem shown in PIC.2. The two screws should be tightened evenly.

-cont.-

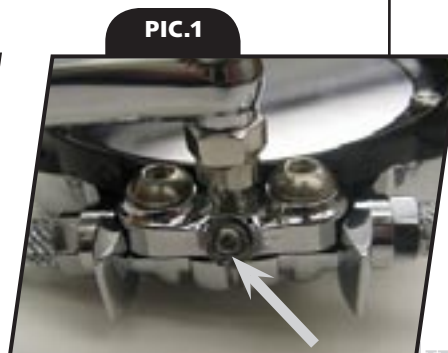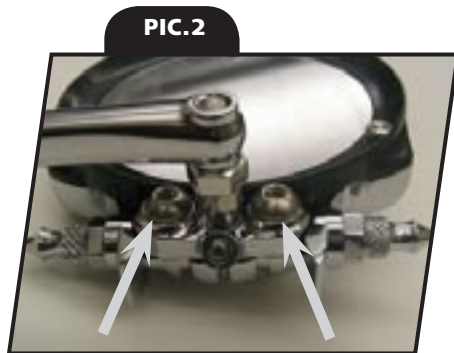

- Be sure to tighten all fasteners after assembly. Küryakyn will not replace lost parts due to improper installation.

PROCEDURE FOR PERCH MOUNT TURN SIGNALS

STEP 1 Remove stock mirrors. Pay close attention to how the stock turn signal ball joint assembly comes apart as this will aid in re-assembly.

STEP 2 Insert a supplied Double End Threaded Stud through the mirror-mounting hole of the perch with longest portion of threads through the perch.

STEP 3 Place a supplied 5/16" Internal Tooth Lock Washer on the upward facing threads of the Double End Threaded Stud. Thread the mirror stem tightly onto the stud. Use an open-end wrench to hold the flange of the stud while the mirror is tightened and positioned.

STEP 4 Reinstall the turn signals in the reverse manner as they were removed with a supplied 5/16" Split Lock Washer between the perch and the turn signal assembly. Be careful not to strip the threads on the ball receptacle.

STEP 5 Position the mirror for best rearward visibility.

NOTE Be sure to tighten all fasteners after assembly. Küryakyn will not replace lost parts due to improper installation.

PROCEDURE FOR NON-PERCH MOUNT TURN SIGNALS

STEP 1 Remove stock mirrors.

STEP 2 Choose the longest Allen bolt from the hardware kit that will provide maximum thread engagement into the mirror stem without bottoming out, either the 5/16"-18 x 1-1/2" or the 5/16"-18 x 2" Socket Head Cap Screw. Insert the Socket Head Cap Screw of choice from the bottom of the perch upward with a supplied 5/16" Split Lock Washer installed between the head of the fastener and the perch.

STEP 3 Place a supplied 5/16" Internal Tooth Lock Washer over the threads of the Socket Head Cap Screw on the topside of the perch. Thread the Socket Head Cap Screw into the mirror stem then position and tighten.

STEP 4 Position the mirror for best rearward visibility.

NOTE Be sure to tighten all fasteners after assembly. Küryakyn will not replace lost parts due to improper installation.

Ride On!