



# INSTALLATION

## LICENSE AREA TRIM W/WHITE LIGHT 3136

FITS: ALL GL1800

PART#	INCLUDED
603136	1 Housing / LED Light Assembly
403135D	1 Drill Template
903135	1 Hardware Kit Includes the Following Eight Items:
403135C	4 Black Neoprene Mounting Cap
201311	4 10-24 X 5/8" Button Socket Cap Screw
200693	2 10-24 X 1/2" Button Socket Cap Screw
200001	6 #10 Flat Washer
200002	6 #10 Internal Tooth Lock Washer
201319	1 M6 x 1.0 x 20mm Flat Socket Cap Screw
403135S	1 Inside Support Bracket
607456W	1 Six Pin Wire Harness
607456C	1 Connector / Cable Tie Kit Includes the Following Three Items:
407455	1 Black Nylon Male Connector Housing
400815	2 Black Nylon Cable Tie, 4"
401209	1 Dielectric Grease
303136	1 Installation Instructions

### THANK YOU FOR CHOOSING KURYAKYN!

#### NOTE

Make sure to use Dielectric grease on all electrical connections.


#### PROCEDURE

**STEP 1** Remove the license plate from bracket.

**STEP 2** Remove the five bolts that hold on the center rear panel using a #5 Allen wrench. Four of the bolts are located at the corners and the fifth is located under the license plate. This center bolt is different than the other four and will not be reused. Remove panel by pulling out on the bottom and slowly working off. Remove the bracket from the rear panel.

**STEP 3** Place the template on the panel paying attention to the up arrow. Drill the four holes using a 1/4" bit, at the four outside locations. See PIC.1.

-cont.-

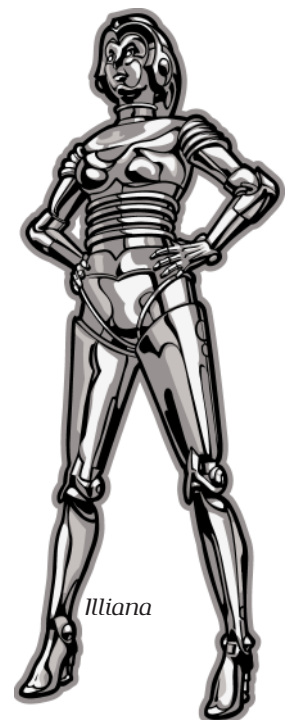

Illiana

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

#### WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.

**CONSEQUENTIAL DAMAGES:**  
Kuryakyn shall not be liable for any consequential or incidental damages.

#### ABOUT OUR CATALOG

You'll find all our innovations for HD, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2004 Kuryakyn USA™ All Rights reserved.

**STEP 4** Drill a hole using a 3/8" bit in the indent location shown in [PIC.2](#).

**STEP 5** Mount your license plate to the back of the trim using the bracket and proper fasteners. Install the 4 neoprene mounting caps to the threaded posts. See [PIC.3](#).

**STEP 6** Run the wire from the light through the 3/8" hole that you drilled in STEP 4. Place the trim piece in position and fasten into place using the 4, 10-24 X 5/8" screws and washers.

**STEP 7** Locate the blue wire connectors and install the supplied wire harness. See [PIC.4](#). The two small connectors shown in [PIC.5](#) are where you will be plugging in the light. If you have already installed additional lights in the rear you may already have an extra connection available to use so you will not need to install the wire harness.


**STEP 8** Install the inside support bracket and M6 x 1.0 X 20mm Flat Socket Cap Screw as shown in [PIC.6](#).

**STEP 9** You are now ready to reinstall the rear center panel. Hold the panel up close enough to the bike so you can plug in the wire connection. Get the panel into place and reinstall the four fasteners.


**PIC. 2**



**PIC. 3**

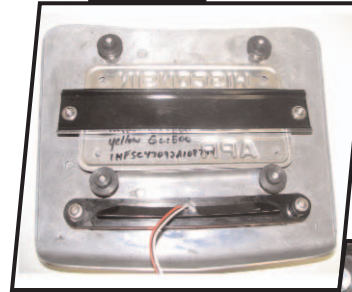


**PIC. 4**

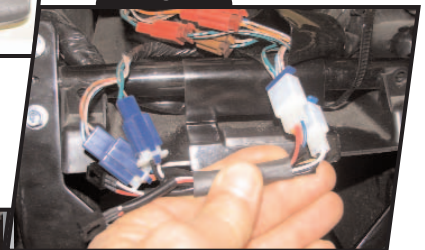

**PIC. 5**



**PIC. 6**

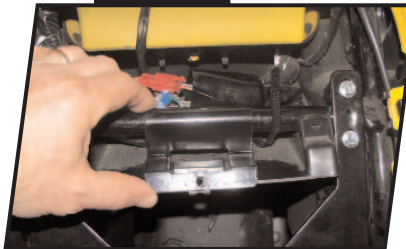

*Ride On!*