



INSTALLATION



CURVED LAY DOWN LIGHTED LICENSE PLATE FRAME 3137

WITH L.E.D. RUN-BRAKE ACCENTS
FITS: ALL '01-UP GL 1800 MODELS, WILL NOT WORK WITH KURYAKYN LICENSE AREA TRIM P/N 3135 OR 3136

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



PARTS INCLUDED

- 1 Curved License Plate Frame W/Run, Brake
- 1 GL Curved Mounting Plate
- 1 Hardware Kit including:
 - 1 Y-Adaptor
 - 4 5/16 Flat Washers
 - 2 5/16-18 Hex Nuts
 - 2 T-Tap Female Quick Slide Scotch Locks
 - 2 Male Scotch Lock
 - 2 5/16-18 X 3/4 Hex Head Cap Screw
 - 4 1/4-20 X 9/16 Flat Socket Cap Screw
 - 2 Rubber Grommets
 - 6 4" Cable Ties
 - 1 Dielectric Grease Pack
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches and 3/8" drill bit

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

-cont.-


STEP 2 Remove the license plate from the bracket.

STEP 3 Remove the bolts that hold the rear panel to the back of the bike. Four of the bolts are located at the corners of the panel. On early models there is a fifth bolt located under the license plate. This center bolt is different from the other four and will not be reused.

STEP 4 Remove the panel by pulling out on the bottom, be careful not to apply too much force and break the panel.

STEP 5 With the rear panel removed, unbolt the stock license plate bracket from the rear panel.

STEP 6 Locate the center bolthole that retained the panel to the rear of the bike and drill it out to 3/8". If there is not an existing hole refer to PIC 1 for placement of the hole.

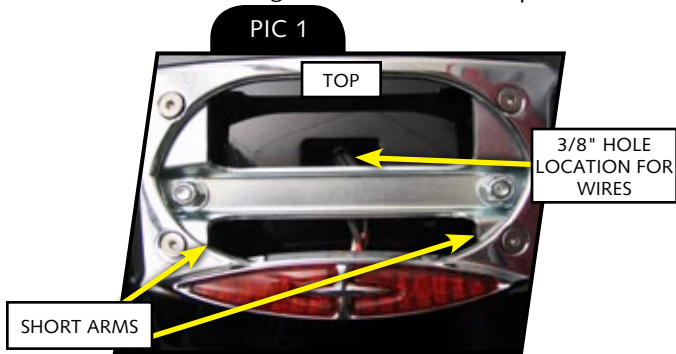

STEP 7 Secure the mounting bracket to the panel with the two bolts, nuts and four washers provided in the kit. Make sure the bolts are installed from the rear with the nuts facing out.

ATTENTION: The mounting plate and frame can only be installed with the short arms facing down and the frame mounted with the light at the bottom.


STEP 8 Now that the mounting bracket is installed, feed the three wire bundles through the 3/8 hole that was drilled in step 6.

STEP 9 Bolt the license plate and the license plate frame to the bracket with the four screws provided in the kit.


NOTE: Make sure to use Dielectric grease on all electrical connections.

STEP 10 In order to use the license plate light, connect the female T-tap scotch locks to the three-wire harness of the accent light. Connect one to the red wire and one to the black wire. (PIC 2)


STEP 11 Crimp the male scotch locks to the red and black wires from the license plate light, and connect them to the matching wire colors from the three-wire harness. (PIC 2)

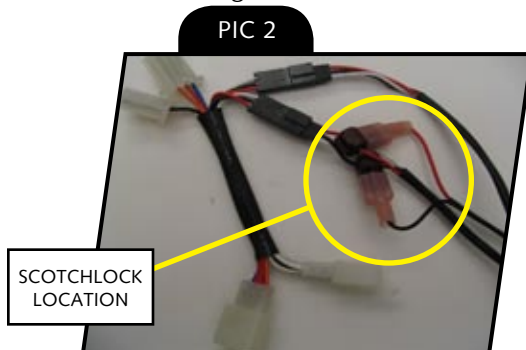

STEP 12 On the back of the bike, locate the black shroud for the connectors (PIC 3). Disconnect both of the blue connectors under the shroud.

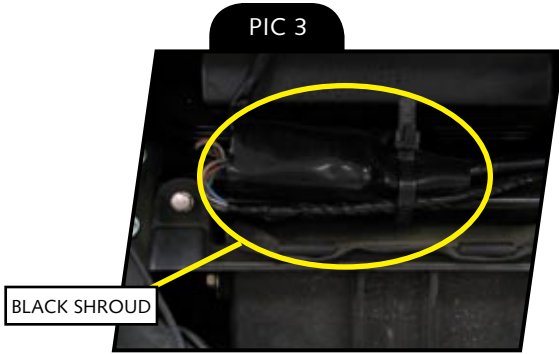

STEP 13 Connect supplied "Y" connector from the kit into the four blue connectors from the factory harness as shown in PIC 4.

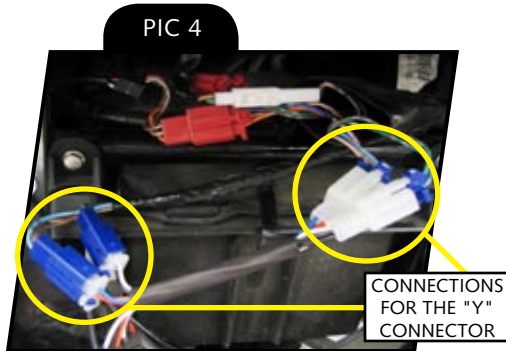

STEP 14 Slide the "Y" connector back into the shroud and tie it back to the frame.

STEP 15 Tie up the excess wire from the license plate frame with the supplied cable ties.

STEP 16 Reinstall the back panel in the reverse order that it was removed.

NOTE: Make sure to use Dielectric grease on all electrical connections. Due to the varying sizes of license plates, modification of the plate may be necessary to fit.

CAUTION! It is the installer's responsibility to ensure that there is adequate clearance between the license plate and any painted surfaces. Küryakyn is not responsible for any damage due to inadequate clearance.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!