



CURVED LICENSE PLATE FRAME 3162

FITS KÜRYAKYN TURN SIGNAL BARS, P/N 2098 AND P/N 2099

PARTS INCLUDED

- 1 License Plate Frame, Chrome
- 1 Back Plate, Chrome
- 1 Hardware Kit, including:
 - 2 Adhesive Foam Pads
 - 4 1/4-20 x 7/16" FHCS Fastener
 - 2 1/4-20 x 1/2" BSCS Fastener
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Allen wrenches, combination wrenches or socket set.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


PROCEDURE

STEP 1 Remove the light bar from the rear fender; the fasteners are under the fender. Save the fasteners for re-use.

STEP 2 Remove the license plate bracket from the light bar.

STEP 3 Install your license plate in the new bracket. The top of the bracket has a notch to fit over the base of the bracket. Be sure the notch faces the top of the bracket. Fasten the top of the bracket to the base with the supplied fasteners.

-cont.-

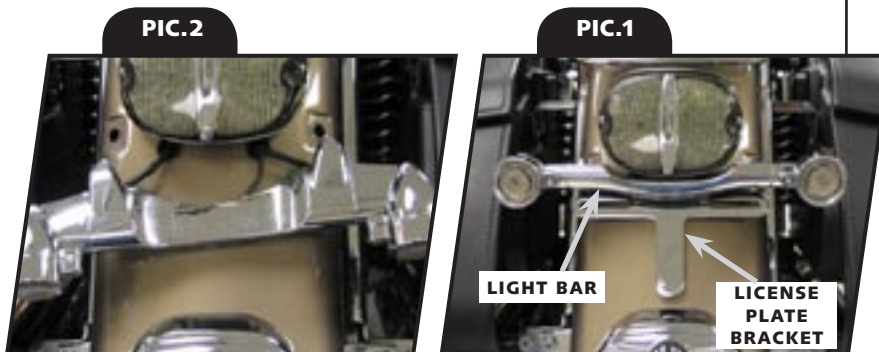

3162-12HD-0807

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY
Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.




ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 4 Measure the distance between the Chrome Back Plate and the fender. If the distance is 1/4" or less install one of the included adhesive foam pads. Remove the adhesive backing and adhere the foam directly to the fender. If the distance is greater than a 1/4", you will need to install both pads. Adhere one to directly to the fender and one on the backside of the Back Plate.

STEP 5 Fasten the license plate bracket to the light bar with the supplied fasteners. Re-install the light bar on the rear fender using the existing hardware.

Ride On!

PIC.3

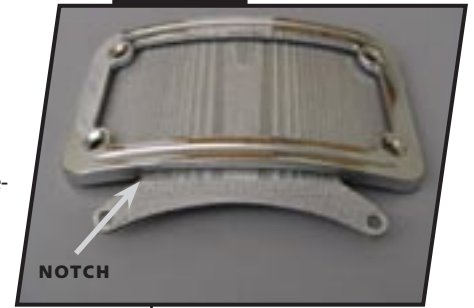

PIC.4

