



INSTALLATION



CURVED SIDE MOUNT LICENSE HOLDER 3171

FITS ALL '86-'06 SOFTAIL MODELS WITH OR WITHOUT KURYAKYN SWINGARM COVERS; ACCEPTS ALL 4" X 7" LICENSE PLATES. COMPATIBLE WITH KURYAKYN SWINGARM COVERS P/N 8102, 8108, 8221, 8222, 8228, 8256, 8284, AND 8288.

PARTS INCLUDED

- 1 Lighted Curved Vertical Side Mount License Holder
- 1 Softail Swingarm Clamp Assembly, 1.120"
- 1 Kuryakyn Softail Swingarm Clamp Assembly, 1.180"
- 1 5/16-18 x 3/4" SHCS Fastener
- 1 Wiring Kit, including:
 - 4 Cable Tie, 4" Black
 - 1 Dielectric Grease
 - 4 T-Tap Female Quick Slide Scotch-Lock Connectors
 - 4 Male Scotch-Lock Connectors
 - 1 1" x 3" x 0.100" Single-Side Adhesive Pad
 - 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

ATTENTION! When routing the wiring harness, be sure to keep the wiring away from any moving parts. Kuryakyn **WILL NOT** warranty any lighted license plate that fails due to pinched, crimped, broken, abraded, or frayed wires.

NOTE It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Allen wrenches, terminal crimpers.

PROCEDURE

STEP 1 Determine which swingarm clamp you will need for bikes with swingarm covers, use 1.180" clamp. For bikes without swingarm covers, use the 1.120" clamp. Remove the two 1/4-20 Socket Head Cap Screws holding the clamp halves together; set them aside for now.

STEP 2 Position the rear half of the clamp on the inside of the swing arm (see PIC.1); secure the front half to the rear using the 1/4-20 SHCS removed in the previous step.

-cont.-



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 3 Thread the wiring harness on the license plate frame through the wire channel and port on the back plate. See [PIC.2](#).

STEP 4 Remove the paper backing from the self-adhesive pad and place the adhesive pad on the backing plate; this will help eliminate excess vibration.

STEP 5 Place your license plate into the license plate frame and secure it to the back plate with the supplied fasteners. See [PIC.3](#).

STEP 6 Loosely mount the license plate assembly to the clamp on the swingarm using the supplied fastener. Adjust the angle of the license plate assembly for best visibility. Secure the fastener. See [PIC.4](#) and [PIC.5](#).

STEP 7 Remove the seat to access the stock wiring connections. Refer to your factory service manual for specific instructions. See [PIC.6](#).

STEP 8 Route the license plate wiring harness along the swingarm and up under the seat to the stock wiring connections. See [PIC.7](#). Be sure the wiring harness will not come in contact with any moving parts; Küryakyn will not warranty lighted license plates that fail due to pinched, crimped, broken, abraded, or frayed wires. Secure the wiring harness along the swingarm with the supplied cable ties.

STEP 9 Use a terminal crimper to install the male terminal ends on the stripped ends of the license plate wiring harness. See [PIC.8](#). The center conductor of the wire must be in the metal sleeve of the terminal end. Do not crimp the insulation of the wire.

ATTENTION! The following two photos show a red wire. The wire color for your particular model may be different. Verify the correct wire function by either using a test light or referring to your factory service manual.

STEP 10 FOR '95 AND EARLIER MODELS: Use a test light to identify the "Run" power wire and ground wire on the bike. Install a Scotch Lock connector on each wire. Place the wire into the metal conductor tabs as shown in [PIC.9](#). Fold the cover down and squeeze until the locking tab snaps into place.

Küryakyn

PIC.2



PIC.3



PIC.4



PIC.5




-cont.-


PIC.6



PIC.7

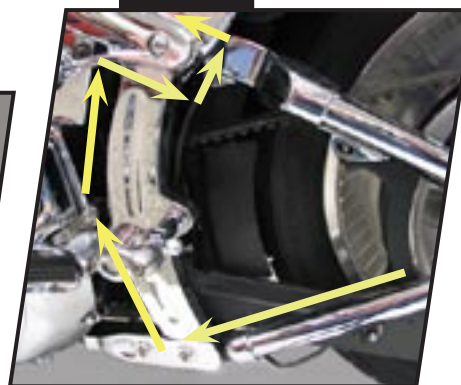

PIC.8

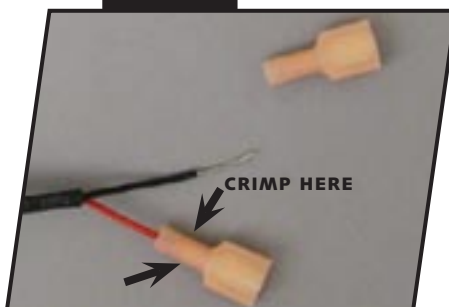

PAGE

2


CURVED SIDE MNT LICENSE HOLDER

INSTALLATION

FOR '96 AND UP MODELS: Use your factory service manual to identify the stock "Run" power wire and ground wire. You must splice into the wires upstream of the 8-pin connector that connects the rear fender harness to the main wiring harness. Install a Scotch Lock connector on each wire. Place the wire into the metal conductor tabs as shown in PIC. 9. Fold the cover down and squeeze until the locking tab snaps into place.

Kuryakyn

PIC.9

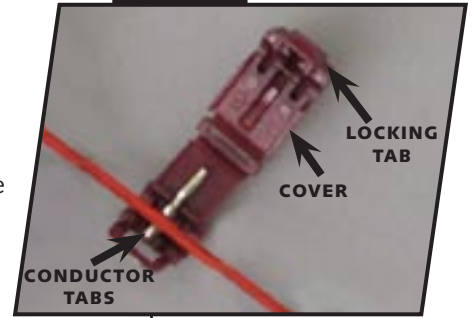


STEP 11 Install the male terminal ends from the license plate wiring harness to the Scotch Lock connectors. The red wire connects to the "Run" power wire; the black wire connects to the ground wire. See PIC.10. Be sure to use the supplied dielectric grease on the terminal connections.


STEP 12 Turn on the ignition and check that the license plate light illuminates when the "Run" light are on. Replace the seat. Be sure all fasteners are secure before riding.

Ride On!

PIC.10

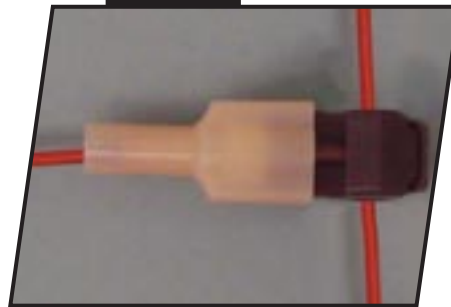

PIC.11

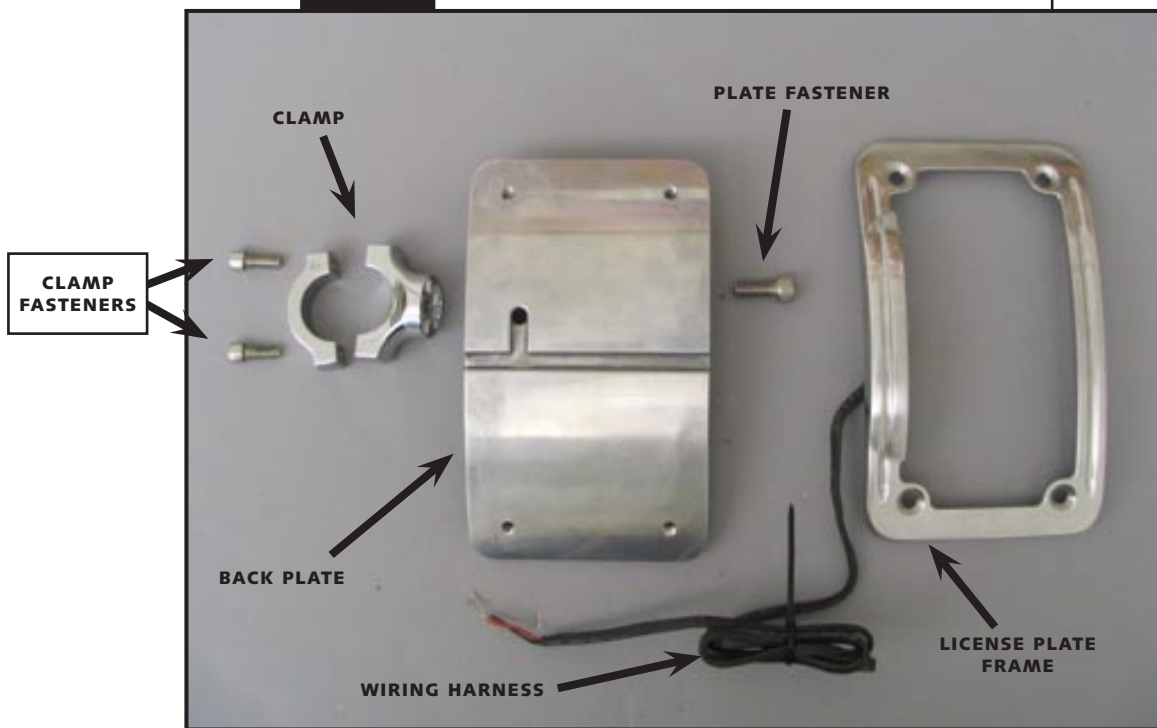

PAGE

3

CURVED SIDE MNT LICENSE HOLDER

INSTALLATION