



LIGHTED TRUNK MOLDINGS

3201

FITS: GL1800

PART#	INCLUDED
603201R	1 Lighted Molding – Right
603201L	1 Lighted Molding – Left
603201C	1 Lighted Molding – Center
603201W	1 Wired Connector
603201PW	1 Power Extension Wire
400815	10 4" Nylon Wire Ties

TOOLS SUGGESTED

Phillips screwdriver, 5mm Allen wrench, Diagonal cutters

PLEASE NOTE



This kit contains the same plug in wiring adapter found in our "Debris Modulator" Lighted Mud flap Kit. These adapters have plugs for two Kuryakyn lighted accessories each. If you already have the lighted mud flap kit (Kuryakyn P/N 4851) installed on your bike, this lighted molding kit can be plugged into the existing wired connector, and the one in this kit need not be installed. Conversely, if you choose to add the lighted mud flap after the installation of these lighted moldings, it will plug into the adapter installed with this kit.

PROCEDURE AVERAGE TIME: 45 MINUTES

STEP 1 Remove the stock trunk moldings. The side moldings must be removed first. Each side molding is secured by two Phillips head screws accessible from the inside of the trunk. PIC.1 Shows the approximate placement of the screw holes in the trunk. (The moldings have already been removed in this picture.). There is a tab at the rear of each molding that interlocks into the center molding securing the corners. Remove the center section by removing the Phillips screw at each end and unsnapping the molding from the trunk.

STEP 2 "Drop" the rear portion of the bottom panel of the trunk. The bottom panel is secured by three Phillips head screws across the back; under the center molding you just removed. There are also two mounting screws on each side of the inside of the trunk, just above the trunks floor. Remove the rear screw from each side, and loosen the front two. The rear of the trunk bottom panel can now swing down.

STEP 3 See PIC.2. Remove the rear center panel, between the saddlebags. There is a button head Allen bolt in each corner of the panel, and one located behind the license plate.

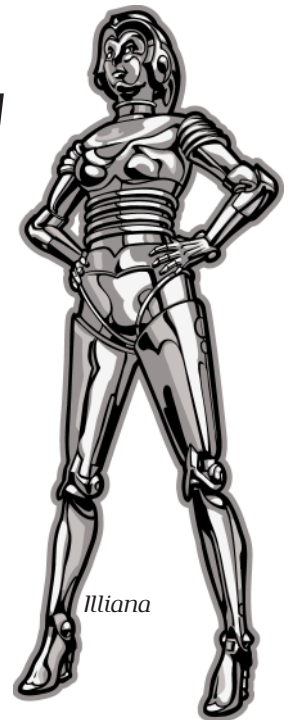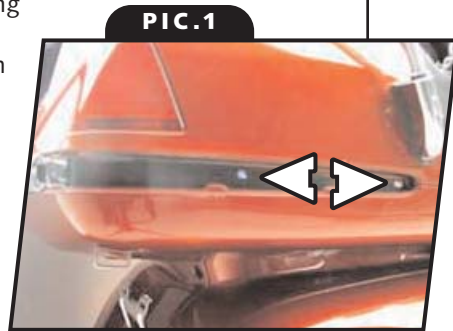

Illiana

E-MAIL

techsupport@kuryakyn.com

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.

CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2001 Kuryakyn USA™ All Rights reserved.

**STEP 4** Locate the following components: trunk light plugs and cover (see [PIC.3](#)) and the wired connector (see [PIC.4](#)).

**STEP 5** Unplug either the blue or red plugs and insert the wired connector as shown in [PIC.5](#). Plug the 26" power extension wire into either of the accessory light plugs.

**STEP 6** Route the power extension wire up, and inside the trunk bottom panel so the remaining plug and short length of wire hangs out of the rear of the trunk panel. Use the included wire ties to secure this power wire out of harms way. [FIG.1](#) (line drawing) shows one possible wire routing.

**STEP 7** Replace the rear center panel, and bottom trunk panel.


**STEP 8** Plug the power extension wire into the plug in the center of the rear molding. Route the two end leads out the opening in each interlocking tab. See [PIC.6](#).

**STEP 9** Snap and screw the center molding into place.


**STEP 10** Plug each side molding plug into the corresponding plugs in the center molding. Install each side molding in the same manner as the stock ones were removed. Secure with the two stock Phillips screws per side.

*Ride On!*

**PIC.3**

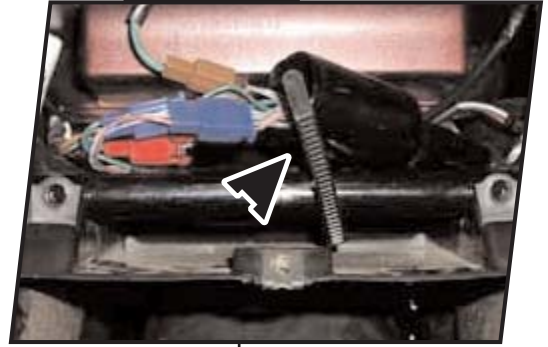

**PIC.4**

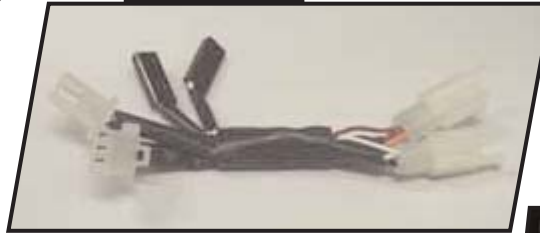

**PIC.5**




**PIC.6**



**Extra Plug**  
Can be used for the installation of Küryakyn "Debris Modulator" Lighted Mudflap (not included).

**FIG.1**

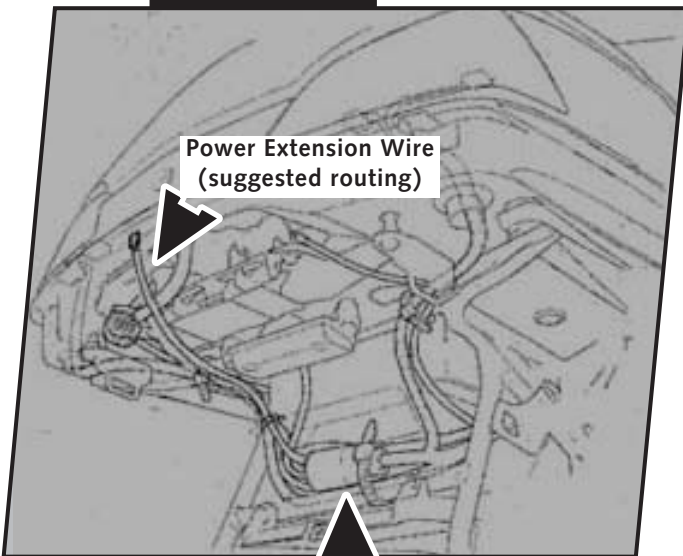

Trunk Lights Plug and Cover