



SADDLEBAG BOTTOM TRIM MOLDING 3212, 3213

3212 – UNLIGHTED FOR GL1800
3213 – LIGHTED LED, WITH RED LENS FOR GL1800
 FITS '01-UP GL1800 MODELS

PARTS INCLUDED

- 1 Right Lower Rear Trim (3213 with LED)
- 1 Left Lower Rear Trim (3213 with LED)
- 1 Right Lower Side Trim
- 1 Left Lower Side Trim
- 1 Hardware Kit for 3213 only
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Allen wrenches and Phillips screwdriver.

PROCEDURE: STOCK LOWER SIDE SADDLEBAG TRIM


STEP 1 Open the saddlebag and locate the four fasteners securing the front and rear hinges. See PIC.1. Remove the fasteners. The lower edge of the saddlebag door will now hang free of the saddlebag. Rest the corner of the door inside the saddlebag; you may want to place a towel or other padding between the door and the body to prevent scratches

STEP 2 Remove the three fasteners securing the stock lower side trim on the saddlebag. Remove the stock lower side trim and replace with the chrome lower side trim, using the stock fasteners. See PIC.2. Be sure the fasteners are straight before threading them into the trim, otherwise you could crack the trim. Secure the fasteners, taking care not to over-torque the fasteners.

STEP 3 Replace the fasteners in the hinges and secure. Repeat for the opposite side

-cont.-

3213-11GL-0906

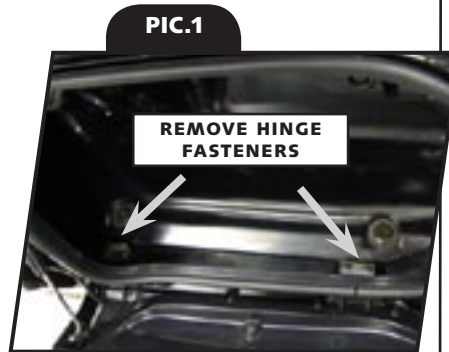

CUSTOMER SERVICE
 877.370.3604 (toll free)

INSTALLATION QUESTIONS
 techsupport@kuryakyn.com
 or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.

- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.







PROCEDURE: LOWER REAR SADDLEBAG TRIM

STEP 4 Remove the stock lower rear saddlebag trim. See [PIC.4](#). Open the saddlebag cover and locate the three plastic fasteners securing the stock lower rear trim. The fasteners are on the floor of the saddlebag, at the far rear. See [PIC.5](#) and [PIC.6](#). Working from under the saddlebag, use a flat-blade screwdriver to push up the center locking mechanism on the plastic fasteners. The fasteners will pop loose. Remove the fasteners and save for reuse.

STEP 5 Install the new lower rear trim, using the stock plastic fasteners. See [PIC.7](#) (non-lighted model shown). To engage the fasteners, pull up on the center locking mechanism, place the fastener in the mounting hole, and press straight down on the center locking mechanism until it sits flush with the outer ring of the fastener. See [PIC.8](#).

STEP 6 Repeat for the opposite side.

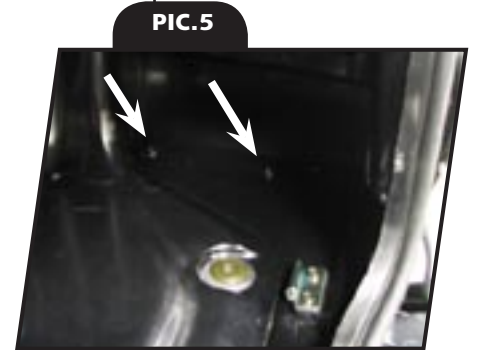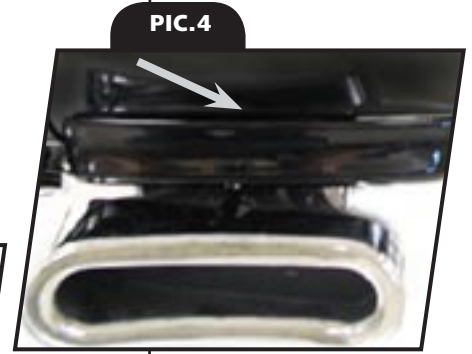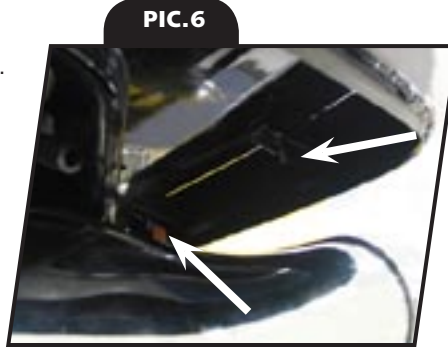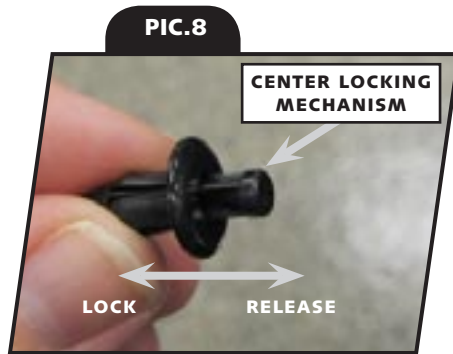



THE FOLLOWING PROCEDURE IS FOR P/N 3213 ONLY: ROUTING AND CONNECTING THE WIRING HARNESSES

STEP 7 Remove the fasteners securing the rear panel to the bike; then remove the panel. There is a fastener in each corner; some models have an additional fastener under the license plate. See [PIC.9](#). If your bike is equipped with a trailer hitch, you may need to remove the receiver and/or ball before removing the center panel.

STEP 8 Route the wiring harnesses from the saddlebag trim on both sides up to the stock rear lighting harness under the rear panel. See [PIC.10](#). Take care to route the wiring harnesses away from any moving parts or the exhaust. Use the supplied cable ties to secure the wiring harnesses.

ATTENTION! WHEN ROUTING THE WIRING HARNESS, BE SURE TO KEEP THE WIRING AWAY FROM ANY MOVING PARTS. KÜRYAKYN WILL NOT WARRANTY ANY LIGHTED PART THAT FAILS DUE TO PINCHED, CRIMPED, BROKEN, ABRADED, OR FRAYED WIRES.

-cont.-

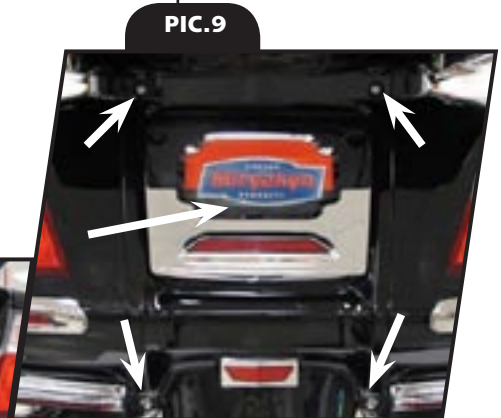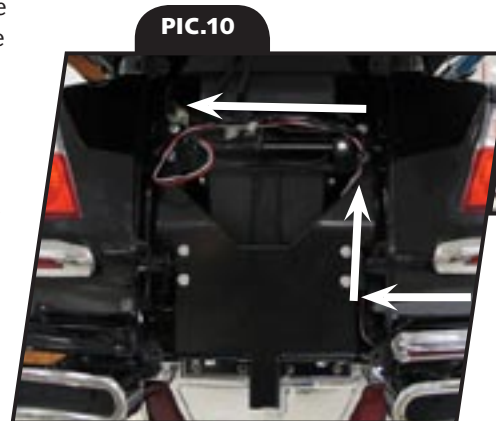

PAGE
2

STEP 9 Locate the stock wiring bundle on the horizontal saddlebag support. Release the locking tab on the cable tie securing the bundle to the saddlebag support and gently pull the wiring from the protective sheath.

STEP 10 For bikes equipped with Kuryakyn Lighted Trunk Moldings or Lighted Mud Flap: Locate the accessory lighting harness connected between the stock blue connectors. Disconnect one end of the accessory lighting harness and install the supplied 6-plug interface harness "inline" between the stock blue connectors and the existing accessory lighting harness.

STEP 11 For bikes NOT equipped with Kuryakyn Lighted Trunk Moldings or Lighted Mud Flap: Disconnect both pairs of the stock blue connectors and install the supplied 6-plug interface harness "inline" between the stock connectors.

STEP 12 Connect the saddlebag trim wiring harnesses to the black 3-pin plug on the 6-plug interface harness. See PIC.11. Neatly bundle the wiring harnesses and tuck them into the protective sheath. Secure the wiring bundle to the horizontal saddlebag support and secure with the cable tie.

STEP 13 Re-install the rear panel and secure with the fasteners. Re-install the trailer hitch (if equipped).


STEP 14 Turn on the ignition and check that the lower rear saddlebag trim lights illuminate in "run" mode. Activate the brakes and check that the lights become brighter.

CAUTION! The saddlebag trim lights are meant only to function as accessory lights. Do not use the saddlebag trim lights as primary brake lights.

Ride On!

Kuryakyn

PIC.11

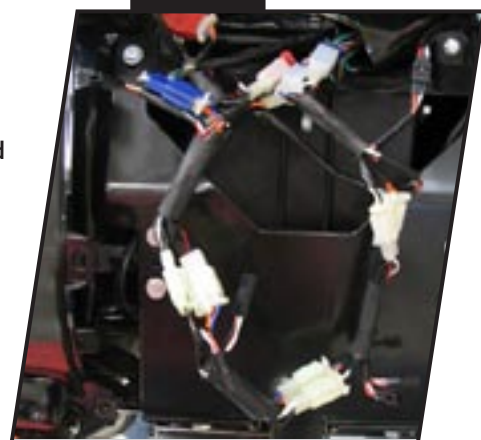

PAGE

3