



ISO® BRAKE PEDAL PAD

4025

FITS: GL1500 AND VALKYRIE

PART#	INCLUDED
401570	1 Chrome pedal top half
401571	1 Chrome pedal bottom half
401572	1 Large rubber insert
401573	1 Small rubber insert
200529	2 Socket head cap screw 8"-32 x .313"
200193	2 Setscrew 10"-32 x .250"

TOOLS SUGGESTED

Allen wrench set, clean rag, solvent

PROCEDURE AVERAGE TIME: 10 MINUTES


STEP 1 See PIC.1 and PIC.2. Start the set screws in the Locations marked "1" and "4". Place the bottom cover half in position under the brake pedal as shown. Tighten the set screw marked "1".

STEP 2 Set the top half of the cover into place. Secure the top and bottom halves together with the two 8-32" socket head cap screws marked "2" and "3".

STEP 3 Snug the remaining set screw marked "4".

STEP 4 Thoroughly clean the recessed surfaces of the brake pedal pad, and affix the two rubber pads by peeling off the backing and firmly holding them into position.

Ride On!

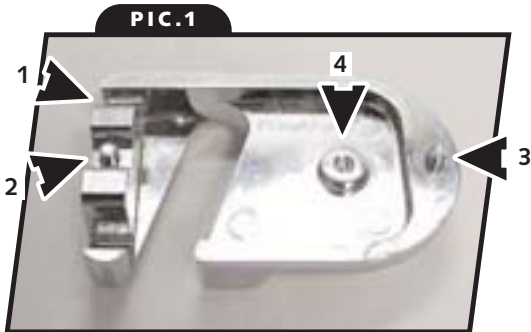

E-MAIL

techsupport@kuryakyn.com

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.

CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2001 Kuryakyn USA™ All Rights reserved.

