



## ERGO TOUR WITH ISO WINGS 4052

FITS: '98-'00 GL1500 AND ALL VALKYRIE (EX. INTERSTATE)

PART #	INCLUDED
604051	1 Pair Ergo Tour Mount Kit Including: 2 Chrome Swing Arm 2 Chrome Swing Arm Mount 2 Hinged Clamp Assembly W/Brace
904040	1 Hardware Kit Including: 2 Valkyrie Bracket/Threaded Rubber Plug 8 1/4"-20 x 3/4" SHCS 18-8 8 1/4" Wave Washer 4 Roll Pin 1/8" x 5/16" 2 Chrome Step Adaptor Top Hat W/5/16" Hole 1-1/8" Long 2 1/2"-20 x 1" HHCS 2 1/2"-20 x 3/4" Nut (Mushroom) Barrel 2 7/16" Hot Spot 2 1/2"-13 x 1" HHCS Course Thread 2 5/16"-18 x 1-1/2" SHCS Smooth Head 2 3/8" Flat Washer 1 Anti-Seize
604450	2 ISO Wing With Screws & Male Mount
408061	2 Clevis Mount
200236	2 3/8"-16 x 1" SHCS
200413	2 "D" Spring Washer
304052	1 Installation Instructions

### THANK YOU FOR CHOOSING KURYAKYN!


#### NOTE

Due to the configuration of the engine guards, less adjustment is available on the Valkyrie models.

#### NOTICE

These cruise mounts are intended to mount on the section of one inch engine guard that runs parallel to the ground and to the center line of the motorcycle on GL1500, and Valkyrie models. In rare cases, variation in the shape or placement of the engine guards on the motorcycle makes modifying (bending) the leveling brace necessary so level placement of the footrest is possible.

-cont.-

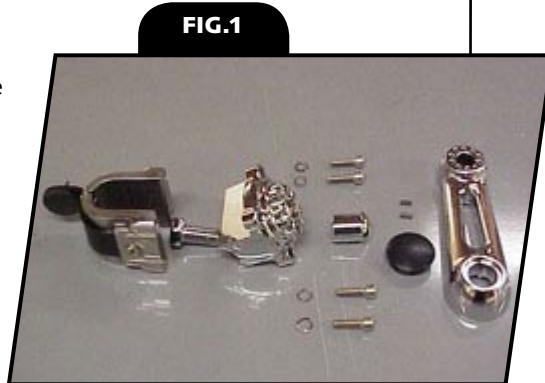

COMPONENTS USED IN KIT

#### CUSTOMER SERVICE

877.370.3604 (toll free)

#### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

- The product must be properly installed, maintained and operated under normal conditions.

- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.

- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.

- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.

- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.

- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.



FIG.2



HINGED CLAMP/LEVELING BRACE ORIENTATION

FIG.3



COMPONENTS AND ORDER OF ASSEMBLY

FIG.4



PLACE MOUNTS HERE ON VALKYRIE MODELS

FIG.5



*LOOK CLOSELY – Notice that the circular cogged face of the swing arm mount is placed at a two degree angle. Place this mount so the pegs angle back toward you.*

## PROCEDURE

**STEP 1** See PIC.1. From the back side insert the 1/2" – 20 x 1" hex bolt through the chrome swing arm mount. The threads will protrude through the center of the round cogged area.

**STEP 2** See PIC.2. Assemble and secure the clamp on the engine guard. Remember to pay attention to Valkyrie of GL orientation on the hinged clamp and to place the cogged surface to the pegs will angle back slightly.

-cont.-

PIC.1



PIC.2



**STEP 3** See PIC.3. Tap the small roll pins into the small holes found in either style footrest mount. This can be a tight fit – if you encounter difficulty, these holes can be drilled out very slightly.

**STEP 4** See PIC.4. Install the footboard mount to the “Ergo” swing arm assembly as shown.

**STEP 5** Securely tighten all fasteners related to this installation. Insert the rubber plug on the back side of the swing arm. Install the chrome “Hot Spot” plugs in the barrel nuts at the swing arm pivot. Periodically inspect both assemblies for fasteners that may have loosened.

*Ride On!*


**PIC.3**



**PIC.4**



**WARNING**

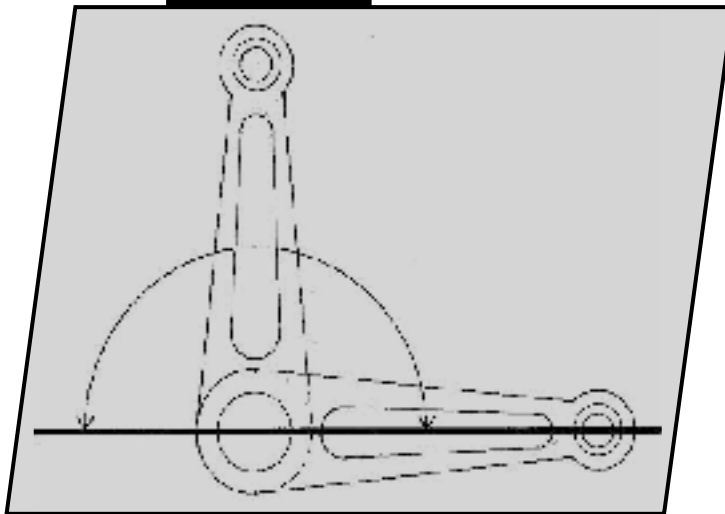

**WARNING:** Position the swing arm in the arc ABOVE THE HORIZONTAL LINE ONLY! Mounting positions under horizontal may cause reduced cornering clearance resulting in loss of control. It is your responsibility to determine that there is sufficient clearance before performing extreme cornering maneuvers.