



PILOT PEGS

4419

PILOT PEGS FIT MANY APPLICATIONS BUT REQUIRE MODEL-SPECIFIC FOOTPEG ADAPTERS (SOLD SEPARATELY).

PART #	INCLUDED
4419	2 Pilot Peg 1 Anti-Seize
304419	1 Installation Instruction

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

ATTENTION! Be sure to use the supplied anti-seize on all threaded fasteners before installation. This will make future removal of the fasteners easier.

CAUTION! PREVENT POTENTIAL SERIOUS INJURIES; VERIFY ALL FASTENERS ARE SECURE BEFORE RIDING.

PROCEDURE — INSTALLATION

STEP 1 Install the footpeg adapters (sold separately); refer to the instruction sheet for your specific application.


STEP 2 Remove the two set screws from the pilot peg body; pull the top plastic pad from the peg body. Remove brass fastener. Save for later use. Remove upper rubber pad.

STEP 3 Loosen the internal fastener and thread the pilot peg onto the adapter.

STEP 4 Rotate the pilot peg body to the desired position; tighten the internal fastener. Reinstall upper rubber pad. Fasten with brass screw.

STEP 5 Install the top plastic pad; install the two set screws and tighten.

STEP 6 Repeat for the opposite side.

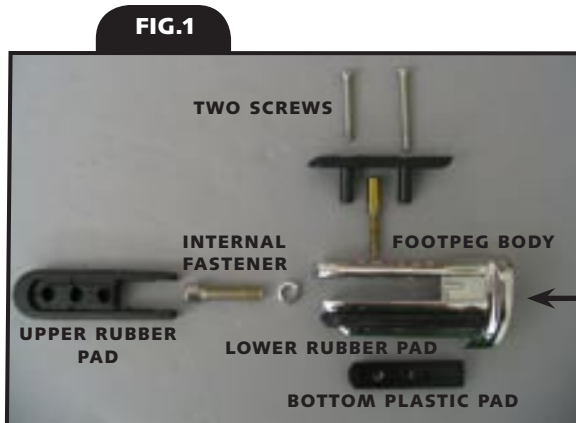

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



PROCEDURE — REPLACING THE RUBBER PADS

STEP 1 Remove the two set screws from the peg body. Remove top plastic pad. Remove brass fastener. Save for later use.

STEP 2 Remove the two rubber pads and bottom plastic pad from the peg body and replace with the new pads. Reinstall upper rubber pad. Fasten with brass screw.

STEP 3 Replace top plastic pad. Install the two screws and tighten.

STEP 4 Repeat for the opposite side.

Ride On!