



INSTALLATION

STILETTO PEGS WITH STIRRUPS

4477

MALE MOUNT

FITS: '84-UP BIG TWINS, '91-UP SPORTSTERS, ALL KURYAKYN CLEVIS MOUNTS AND VIRTUALLY ALL OTHER AFTERMARKET CLEVIS MOUNTS

PART#	INCLUDED
604477L	1 Stiletto Peg and Stirrup Assembly – Left
404477R	1 Stiletto Peg and Stirrup Assembly – Right
304477	1 Instruction Sheet

NOTE

Optional domed end caps are available to replace the pointed end caps. (Sold separately.)

TOOLS SUGGESTED

3/32" Hex Key and 1/4" Extended Hex Driver, Ratchet, 1-1/8" Wrench or 12" Adjustable Wrench.

PROCEDURE AVERAGE TIME: 30 MINUTES

STEP 1 Remove existing footpegs. Note position of all fasteners and spring washers.

STEP 2 Install Stiletto Pegs with Stirrups in the same manner the existing pegs were removed making sure to correctly position all spring washers and hardware.

ADJUSTING THE POSITION OF THE FOOTPEG AND STIRRUP

WARNING!!

Even if the Stiletto Pegs and Stirrups appear to be positioned correctly, it is important to complete the following steps to ensure the pegs are tightened securely so they do not slip or vibrate loose while in use. Failure to do so could result in serious injury or death.

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES:
Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for HD, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2004 Kuryakyn USA™ All Rights reserved.

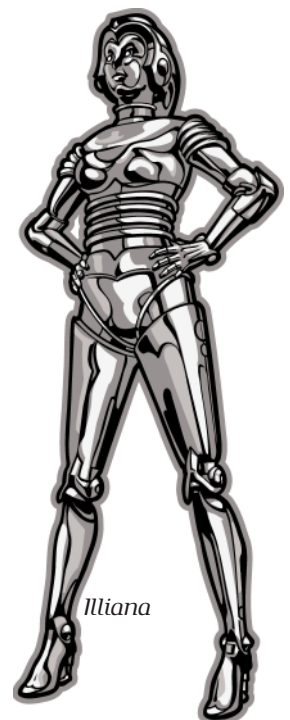

Illiana

STEP 3 With a 3/32" hex key, remove the #5-40 x 3/8" socket head cap screws (FIG.1-U), pointed end cap (FIG.1-T), and knurled trim ring (FIG.1-S) from one of the Stiletto Pegs. Remove the end rubber (FIG.1-P) from the peg body (FIG.1-M) to expose the 5/16"-18 x 2" socket head cap screw (FIG.1-R).

STEP 4 With a 1/4" hex driver, remove the 5/16"-18 x 2" socket head cap screw and slide the peg off the mount.

STEP 5 Using a 1-1/8" wrench or 12" adjustable wrench, loosen the 7/8"-20 nut (FIG.1-K). Use your judgment and set the angle of the stirrup to what would appear to be the natural angle needed to support your foot and securely tighten the 7/8"-20 nut. Slide the peg back in place, install the 5/16"-18 x 2" socket head cap screw finger tight, then sit on the bike to confirm the stirrup position. Repeat the process until the stirrup is located in the optimum position.

STEP 6 Adjust the angle of the peg so the rider's or passenger's foot sits squarely on the rubber pads when seated on the motorcycle. Securely tighten the 5/16"-18 x 2" socket head cap screw once the adjustment is complete.

STEP 7 Reinstall end rubber, knurled trim ring, end cap, and the #5-40 x 3/8" socket head cap screws.

STEP 8 Repeat STEP 3 through STEP 7 for the other Stiletto Peg with Stirrup.

Ride On!

FIG. 1