



CHROME PASSENGER BOARD MOUNTS 4536

FITS: '93-UP DRESSERS AND ROAD KINGS

PARTS INCLUDED

- 2 Chrome Passenger Board Mount Assemblies
- 1 Hardware Kit Including:
 - 2 5/16" x 12" Spring
 - 2 Detent Ball
 - 2 3/8"-16 x 1" SHCS Grade 8
 - 2 3/8" Split Lock Washer
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

ATTENTION! It is the installer's responsibility to ensure all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.



PROCEDURE

STEP 1 Pull up and out on the OEM floor board rubber pad exposing the board mounting pins. See PIC.1. It will not be necessary to fully remove this pad.

STEP 2 Using a screw driver or similar tool, push the mounting pins into the center space on the board. This will release the board from the mount. See PIC.2. There is a detent ball that will probably fall out of its position on top of the spring on the board mount.

STEP 3 Remove the OEM fastener that holds the board mount to the bike. See PIC.3. This will expose the two different threaded mounting holes marked as A and B in PIC.4.

-cont.-

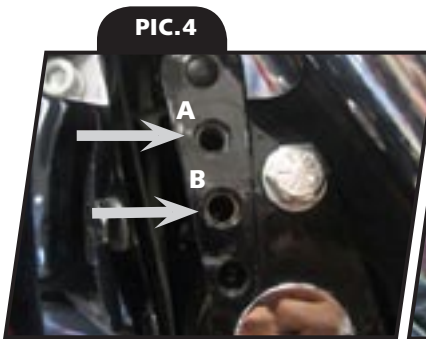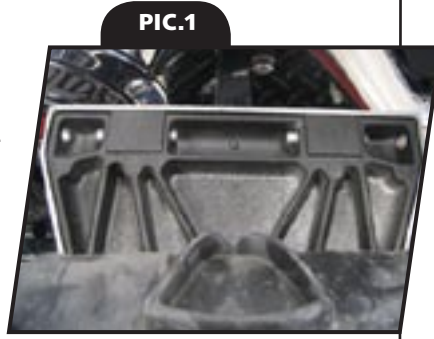

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 4 Install the new board mount using the supplied fastener and lock washer. Thread the fastener into the hole marked A or B in [PIC.4](#). The preference is all yours. This fastener needs to have a torque value of 15-18 ft. lbs. See [PIC.5](#).

STEP 5 Insert some grease or ant-seize into the hole where the new spring will be installed. Place grease or anti-seize on the detent ball to help hold it in place when installing the board. See [PIC.6](#).

STEP 6 Install the board being very careful not to displace the detent ball from its proper location. The mounting pins will be pushed in from the outside thru the hole on the exterior of the board. See [PIC.7](#).

STEP 7 The mounting pins need to be centered in their location so the rubber pad will fit into place. Refer to [PIC.1](#) for pin location.

STEP 8 Press the rubber pad back into its proper location on the board.

Kuryakyn®

PIC.5



PIC.6



PIC.7



Ride On!

PAGE

2

CHROME PASSENGER BOARD MTS

INSTALLATION