



INSTALLATION

2" ADJUSTABLE LOCKABLE OFFSETS 4558

THE OFFSETS CAN BE USED TO REPOSITION ANY MALE-MOUNT FOOTPEGS; EITHER PASSENGER PEGS OR HIGHWAY PEGS. THIS INSTALLATION REQUIRES MODEL-SPECIFIC KURYAKYN SPLINED ADAPTERS, SOLD SEPARATELY. PLEASE ORDER THE CORRECT ADAPTER (PN 8813, 8814, 8817, 8819) FOR YOUR SPECIFIC APPLICATION BEFORE ATTEMPTING TO INSTALL THE OFFSETS.

PART #	INCLUDED
	2 2" Adjustable Lockable Offsets
	1 Hardware Kit, including:
	2 5/16" Chrome Hot Spots
	2 3/8" Chrome Hot Spots
	2 Anti-Seize Compound
304558	1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Allen wrenches, combination wrenches, or socket set depending on your configuration.

WARNING! The Adjustable Lockable Offsets must be used with Kuryakyn model-specific splined adapters (sold separately), and are not compatible with any other footpeg mounts. **FAILURE TO HEED THIS WARNING MAY CAUSE SERIOUS INJURIES OR DEATH!**

NOTE If you are using a cogged mount with dual Allen fasteners, the footpeg may not fully retract in the upward position.

PROCEDURE

STEP 1 Remove the stock footpegs. Install the correct model-specific splined footpeg adapter, sold separately. Refer to the installation instructions included with the splined adapters for specific steps. Use the stock hardware to secure the splined adapters. See PIC.1.

-cont.-

PIC.1



CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 2 Loosely assemble the Highway Peg components, using [PIC.2](#) as a guide. Install the left and right side assemblies onto the splined adapters.


STEP 3 Adjust the position of the offset arm on the splined adapter then secure the fastener.

STEP 4 Adjust the position of the footpeg and the clevis. Remove the footpeg and adjust the clevis to the desired position; secure with the clevis fastener. Reinstall the footpeg and secure with the footpeg fastener. See [PIC.3](#).

NOTE Position the Spitfire Clevis so the peg mount stop is on the topside, regardless of which side the clevis is installed on the bike. (See [PIC.4](#))

STEP 5 Verify the position of the footpegs for comfort. Verify all fasteners are secure.

STEP 6 Install the Hot Spots. Install the 5/16" Hot Spots over the footpeg fastener heads; install the 3/8" Hot Spots over the clevis-to-footpeg fastener.

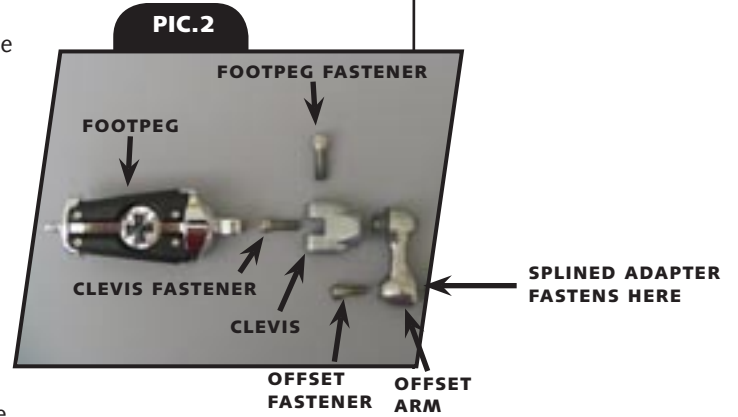

Ride On!

