



ERGO ENGINE GUARD FOR VTX1800 4585

FITS: ALL VTX1800 MODELS

PART #	INCLUDED
604585	1 Ergo guard assembly, right
614585	1 Ergo guard assembly, left
607891P	1 Peg assembly
201241	2 5/16-18 x 1" SHCS fastener
904585	1 Hardware kit, including:
	3 M10 x 1.25 x 25mm hex flange head bolt
	1 M10 x 1.25 x 90 hex flange head bolt
	2 M10 x 1.25 x 100 hex flange head bolt
	1 M10 x 1.25 x 110 hex flange head bolt
	1 M10 x 1.25 x 175 hex flange head bolt
	1 Spacer tube
304585	1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Allen wrenches, combination wrenches.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to perform all steps in the procedure.

PROCEDURE FOR BIKES WITH FLOOR BOARDS

STEP 1 Install the ergo engine guard on the bike frame using the supplied fasteners. See PIC.1.

STEP 2 Repeat for opposite side. Verify fasteners are secure

PROCEDURE FOR BIKES WITH STOCK FOOT PEGS, LEFT SIDE

STEP 1 Remove the fasteners securing the shifter assembly to the bike frame.

-cont.-



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.



STEP 2 Install the left ergo engine guard, horn, and shifter assembly, using the clearance holes shown in PIC.1. Fasten with the supplied bolts and washers. See PIC.2.

STEP 3 Remove the fastener securing the shifter from the assembly; see PIC.3.

STEP 4 Adjust the shift linkage for proper operation. See PIC.4. Reinstall the shifter to the assembly.

FOR BIKES WITH STOCK FOOT PEGS, RIGHT SIDE

STEP 5 Remove the fasteners securing the brake assembly to the bike frame. See PIC.5. Two fasteners go through the frame to threaded inserts; the rearmost fastener is secured with a nut on the underside of the frame. Save the spacer for reuse.


STEP 6 Install the right ergo engine guard and brake assembly, using the clearance holes as shown in PIC.6. Reuse the upper stock spacer; use the supplied spacer with the lower mounting bolt. Fasten with the supplied bolts and washers.

STEP 7 Verify all fasteners are secure.

PIC.2



PIC.3

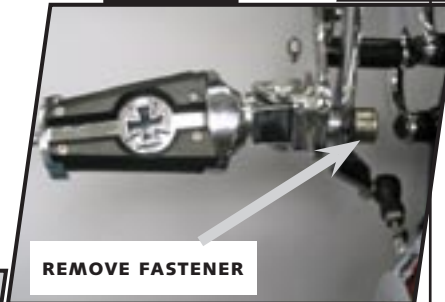

PIC.4



PIC.5



PIC.6

