



## TRANSFORMER GRIPS FOR SPORT BIKES 6237

**FITS: UNIVERSAL FITMENT FOR SPORT BIKES WITH 7/8" HANDLEBARS WITH OEM GRIPS THAT ARE NOT LONGER THAN 4-5/8"**

**HONDA: ALL '00-UP CBR600, '04-'09 CBR1000RR '00-'01 CBR 929, '02-'03 CBR954RR, '00-'03 CBR1100XX, '00-'07 RC51 & '00-'08 VFR800 INTERCEPTOR**

**KAWASAKI: ALL 00-UP ZX-6R, '00-'03 ZX-7R, '02-'03 ZX-9R, '04-UP ZX-10R, '00-'01 ZX-11R, '00-'05 ZX-12R & '06-UP ZX-14R**

**SUZUKI: ALL '99-UP HAYABUSA (GSX1300R), '00-UP GSX-R 600, '00-UP GSX-R 750 & '01-UP GSX-R 1000**

**YAMAHA: ALL '00-UP YZF-R6/R6S/600R, '00-UP YZF-R1/1000R & '01-UP FZ1/1000**

### PARTS INCLUDED

- 1 Right Side Assembly: 1" I.D. Transformer Grip
- 1 Left Side Assembly: 7/8" I.D. Transformer Grip
- 2 Zombie Grip Emblems
- 2 Widow Grip Emblems
- 2 Maltese Grip Emblems
- 2 Tube of Adhesive
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**WARNING!** THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

### TOOLS SUGGESTED

Set of Hex Wrenches, Phillips Screwdriver, Sharp Utility Knife, Sandpaper or Emery Cloth, Needle Nose Pliers, Safety Glasses, Clean Rag, Small Tape Measure

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

### PROCEDURE FOR RIGHT SIDE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**STEP 2** Measure the distance between the switch housing and the beginning of the grip. Mark the throttle sleeve and make sure you do not exceed this mark with the new grip. Exceeding this mark will interfere with proper use and could cause the throttle to stick. (PIC 1)

**-cont.-**

**CUSTOMER SERVICE**  
877.370.3604 (toll free)

**INSTALLATION QUESTIONS**  
techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**STEP 3** With a razor blade or sharp knife, slice the right grip lengthwise down to the handlebar for the entire length of the grip. Remove any decorative end cap or handlebar end weights, etc.

**STEP 4** "Peel" the grip completely off the handlebar.

**STEP 5** In most applications, the throttle sleeve will have ribs on it. Sleeves that have ribs running around the grip will have to be sanded or cut off. Ribs running down the length of the sleeve (PIC 2) may be acceptable. You will have to determine this when you test fit the new grip.

**STEP 6** Slide the 1" ID Transformer Grip on the throttle sleeve to test fit. Do not exceed the marks you made in Step 2. Remove the 4 screws and the grip end cap with the grip still on the sleeve. Inspect the inside of the grip to check for any clearance problems. You can use your pinky finger to check this.

**STEP 7** Twist the throttle to check for proper operation and clearance. Adjust the grip (PIC 1) as desired to show grip emblems. Mark the location on the throttle sleeve (PIC 1).

**STEP 8** Once you have test fit the new grip and made any necessary changes, you can remove the throttle tube from the housing/handlebar. Remove the hardware holding the housing together. Before removing the throttle tube completely take the throttle cables and loosen them up to make it easier for removal and reapplying the sleeve.

**ATTENTION!** A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

**CAUTION!** Make note of where the throttle tube is when removing so you can position your grip to desired location when gluing.

**STEP 9** With all test fits taken into consideration and the end cap still off, put the glue into the grip. Try not to get glue on the inside bottom of the grip where it could become a problem.

**IMPORTANT** You have one opportunity to install this grip correctly. The glue will set up permanently the instant you stop moving it in to position! Be sure you know exactly where you want the grip to end up before you begin pushing it into place.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Kuryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**STEP 10** In one swift, sure movement, slide the grip into the desired position on the throttle sleeve. Hold the grip clinched in your hand for 15 seconds. As soon as you let go of the grip, that is where it will stay.

**STEP 11** Wipe any excess glue that may have dripped. Wipe any excess glue between the grip and the switch housing, or the inside of the end cap as this could potentially cause a problem.

**STEP 12** Let dry for a few minutes before installing back on to the bike.

**STEP 13** Once dry to the touch, reinstall the throttle tube in the switch housing. Hook up all throttle cables and anything else disconnected in removal.


**STEP 14** Readjust throttle cables to proper positions.

**WARNING!** FAILURE TO ADJUST THE THROTTLE CABLES PROPERLY MAY RESULT IN LOSS OF CONTROL CAUSING SEVERE INJURY OR DEATH.


**STEP 15** Once tightened, test the grip to make sure that there is no obstruction. Check the inside of the grip through the end cap hole. If everything looks and operates correctly, reinstall the end cap.

-cont.-

PIC. 1

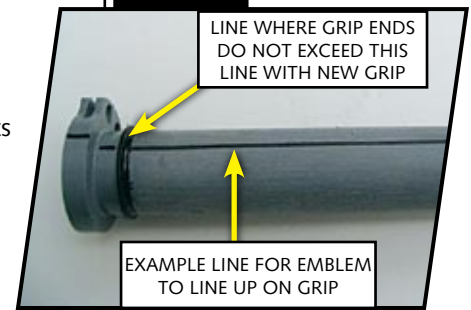

PIC. 2

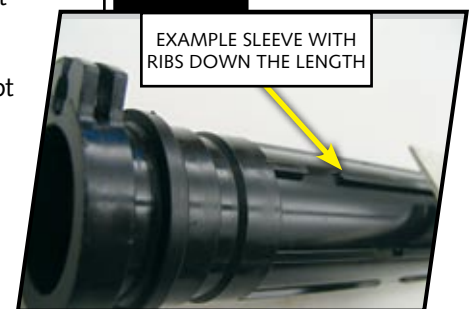

**STEP 16** Ensure that all components work freely and correctly before use of the motorcycle.

**CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

## PROCEDURE FOR THE LEFT SIDE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**STEP 2** With a razor blade or sharp knife, slice the left grip lengthwise down to the handlebar for entire length of the grip. Remove any decorative end cap or handlebar end weights, etc.

**STEP 3** "Peel" the grip completely off the handlebar. Completely sand any grip or glue residue from the bar. The bar must be completely clean. Abrade the surface of the handlebar with sandpaper or emery cloth.

**ATTENTION!** Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

**STEP 4** Test fit the new grip before gluing. Determine the desired grip emblem orientation. Make sure that all levers, switches, mirrors etc. still have the necessary clearance that they need.

**CAUTION!** Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

**IMPORTANT** You have one opportunity to install this grip correctly. The glue will set up permanently the instant you stop moving it into position!! Be sure you know exactly where you want the grip to end up before you begin pushing it into place.

**STEP 5** Apply 1 entire tube of glue to the inside of the grip, distribute evenly inside the grip. Be sure not to drip glue onto the inside bottom of the grip end cap.

**ATTENTION!** The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

**STEP 6** In one swift, sure movement, slide the grip into the desired position on the handlebar. Hold the grip clinched in your hand for 15 seconds. As soon as you let go of the grip, that is where it will stay.

**STEP 7** Wipe any excess glue. Check for any excess glue between the grip and the switch housing and wipe clean.

## EMBLEM INSTALLATION

**STEP 1** With the Transformer Grip you have three different choices when it comes to the emblems. A Zombie, Widow, and the Maltese.

**STEP 2** To install, simply slide one end of the emblem into the opening of the emblem location. Route the opposite end around with your finger, until the emblem is completely secured in the opening.

**STEP 3** Repeat step 2 on the opposite grip.

**STEP 4** To remove the emblem, use a small flat blade screwdriver and lift up the edge of the rubber where the emblem is secured. Slightly pry up the edge of the emblem until you can pop it out with your fingers.

**STEP 5** Replace with the desired emblem and be sure that the emblem is completely seated in place.

*Ride On!*

**Küryakyn**<sup>®</sup>

PAGE  
**3**

**TRANSFORMER GRIPS** INSTALLATION