



DRIVER FOOTPEG MOUNT COVERS 7011

FOR VTX 1300

FITS: ALL '03-UP HONDA VTX 1300 C MODELS

PARTS INCLUDED

- 1 Right Cover
- 1 Left Cover
- 1 Hardware Kit, including:
 - 2 M8 x 1.25 x 45mm Button Socket Cap Screw (BSCS)
 - 2 M8 x 1.25 Nylon Insert Locknut
 - 2 Alcohol Pad
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex wrenches, combination wrenches, soapy water and rag

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE


STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition.

STEP 2 Remove the existing left side footpeg mounting hardware; set it aside, it will not be re-used. See PIC.1.

STEP 3 Remove any grease or debris from the installation area (yellow lines in PIC.1) with soapy water and a clean rag; allow the area to dry completely.

ATTENTION! Thoroughly clean the area of grease, oil, dirt, or other debris to ensure proper adhesion. Kuryakyn WILL NOT warranty any parts lost due to improper installation.

-cont.-

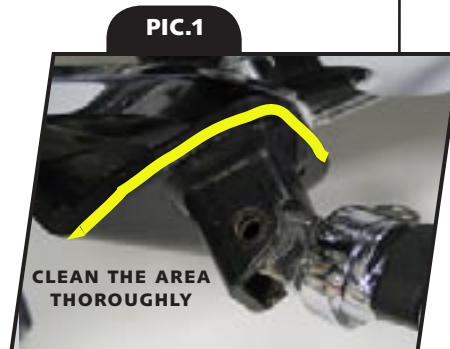

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



ATTENTION! The adhesive may not correctly bond if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Clean the area with the included alcohol cleaning pad; allow the area to dry completely.

STEP 5 Locate the Left Cover; rub the backing on the adhesive strip to activate the adhesive before applying.

STEP 6 Remove the adhesive backing; position the cover over the footpeg mount as shown in PIC.2.

STEP 7 Insert an included M8 screw through the cover and footpeg mount and secure it with an included M8 nylon insert locknut. Ensure that the footpeg does not contact the cover before tightening the M8 screw and lock nut.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

STEP 8 Press the cover into place for 1 minute to ensure proper adhesion. Full bond strength will occur within 24 hours. See PIC.3.


STEP 9 Repeat STEP 2 through STEP 8 for the right side.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

Ride On!

Kuryakyn

PIC.2

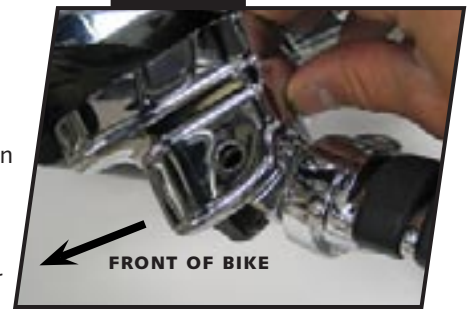

PIC.3



PAGE

2