



INSTALLATION

"DEBRIS" MODULATOR MUD FLAP 7251

FITS: GL1800'S EQUIPPED WITH P/N 7248 "MUD FLAP ONLY" MOUNTING BRACKET OR KURYAKYN P/N 7647 TRAILER HITCH WITH P/N 7249 "MOUNTING BRACKET FOR USE WITH TRAILER HITCH". THIS MUD FLAP IS NOT COMPATIBLE WITH ANY OTHER BRAND TRAILER HITCH.

PART #	INCLUDED
607251	1 L.E.D. Mud Flap
907251	1 Wiring Kit Includes: 1 6-Connector Power Adapter 10 4" Cable Tie 1 Dielectric Grease
307251	1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KURYAKYN!

PLEASE NOTE


It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

PROCEDURE

STEP 1 Observe the four slotted holes positioned horizontally along the very bottom of the mounting bracket. These are the mounting holes for the Mud flap. See PIC.1. Attach the Chrome Mud Flap and Black Front Strip using the four 10-24 socket head cap screws, flat washers and Kep lock nuts provided.

STEP 2 Using the nylon cable ties provided run and secure the right and left wire leads up the frame uprights shown by the arrows in PIC.1.

-cont.-

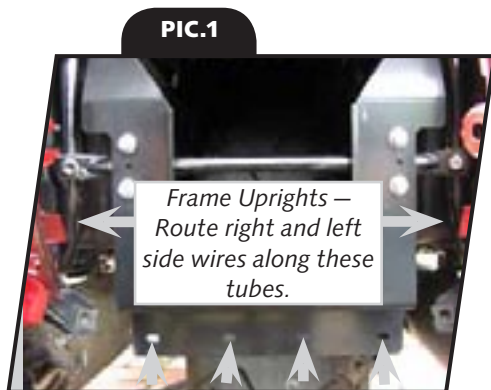

MUD FLAP MOUNTING SLOTS

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA™ All Rights reserved.



STEP 3 Locate the black soft plastic wire cover shown in [PIC.2](#). This cover contains two red and two blue plugs. Disconnect the blue plugs. Locate the “wired connector” shown in [PIC.3](#). Plug the wired connector into the blue plugs – it only connects one way. See [PIC.4](#).

STEP 4 Plug the right and left power leads from the mud flap into the black sockets on the wire connector as shown in [PIC.5](#). This photo shows only one lead plugged in.

STEP 5 Replace the rear center panel on the rear of the motorcycle. **Test the lights for run and brake functions with the motorcycle running!**

NOTE Please refer to Küryakyn P/N 7249 Installation Instructions to mount this mud flap using the “Debris” Modulator Mounting Kit, sold separately.

Küryakyn

PIC.2



PIC.3



PIC.4



PIC.5



Ride On!

PAGE

2

“DEBRIS” MODULATOR MUD FLAP

INSTALLATION