



FRAME TRIM LIGHTS 7335

FITS: ALL '01-UP GL1800 MODELS

PARTS INCLUDED

- 2 LED Strip Lights
1 Hardware Kit
1 Dielectric Grease
5 T-Tap Connectors
5 Male Spade Terminal Connectors
8 4" Cable Ties
2 Alcohol Pads
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Screwdrivers

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer...

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
• The product must be properly installed, maintained and operated under normal conditions.
• Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
• Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
• Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
• Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



STEP 2 Locate the rubber boot at the base of each mirror. Peel this boot back away from the fairing to expose the wire connections. Pay attention to how the boot joins with the fairing; this will aid in replacing the boot in its proper position during reassembly. (PIC 1)

STEP 3 Carefully remove the trim molding (PIC 2). The upper edge has a tab that fits into a slot under the fairing. You may find it helpful to start removing the trim at the bottom and work your way to the upper edge.

STEP 4 Remove the four fasteners under the molding (PIC 3). Pay attention to the location of the individual bolts, as they are not identical.

STEP 5 Remove the side compartment (PIC 4). Use a center punch to depress the locking mechanism in each of the plastic fasteners.

STEP 6 Remove the chrome side cover (PIC 5) by pulling carefully on the lower section, and then the rear section. Once the pins are loose, the cover can be removed from the motorcycle. (Right side pictured)

STEP 7 Clean the area highlighted with the supplied alcohol pad. (PIC 6)

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 8 Connect the 2-wire power wire to the Strip Light. Test fit the light to the cleaned area from Step 7 before mounting.

STEP 9 Mount the LED Strip Light. Make sure that the light connector is located at the top of the frame (next to the throttle cables - on the right side). (PIC 6)

STEP 10 Route the power wire up through the fairing and out the opening by the mirror. (PIC 7) Crimp one of the Male Spade Terminals to each of the wires.

STEP 11 Locate the power and ground wires coming from the mirror. The left side has an orange/white stripe power wire with a green ground; clamp one of the T-Taps to each. (PIC 8)

STEP 12 The right side has a blue/white stripe power wire with a green ground; clamp one of the T-Taps to each. (PIC 9)





STEP 13 Connect the black wire with a Male Spade Terminal from the LED lights to the green ground wire T-Tap. The red-wire with a Male Spade Terminal connects to the colored power wire with the white stripe (orange or blue).

ATTENTION! Küryakyn recommends the use of dielectric grease on electrical connections.

STEP 14 Test the function of the Trim Lights. Turn the key to the "On" position, the lights should illuminate.

STEP 15 Secure all wiring and re-assemble all components in the reverse order they were disassembled.

-cont.-

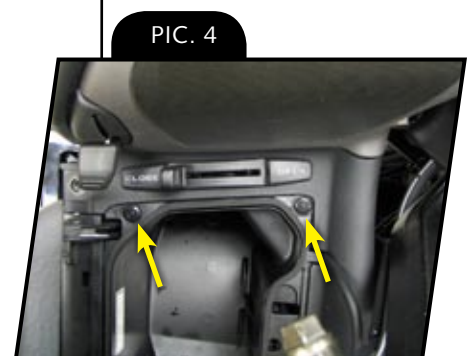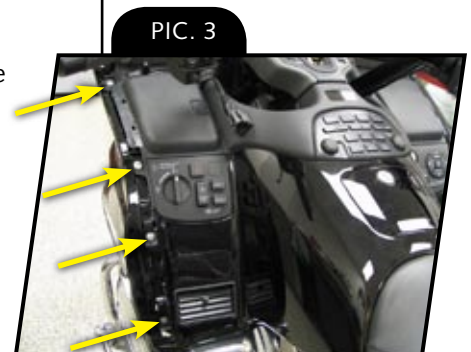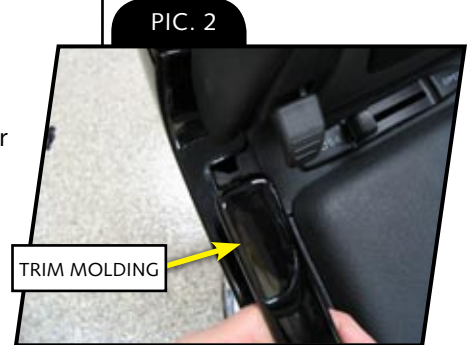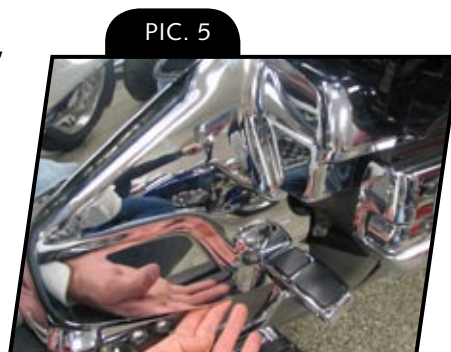

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Kuryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

Ride On!


PIC. 6



PIC. 7



PIC. 8

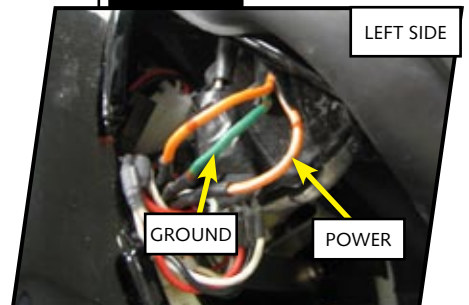

PIC. 9

