



FRONT FENDER EXTENSION 7354

FITS: '01-UP GL1800

PART#	INCLUDED
607354	1 Chrome Fender Extension
907354	1 Hardware Kit Including the Following:
201244	2 M6-1.00mm x 8MM Button Head Cap Screws – Chrome
201245	2 M6-1.00mm T-Nuts, Zinc
307354	1 Instruction Sheet

TOOLS SUGGESTED

Drill, 1/8" and 3/8" Drill Bits, 5mm Hex Key, Non-permanent Fine Point Marker, Mineral Spirits.

NOTE

It is much quicker to install this fender extension with the fender on the motorcycle, but to assure a successful outcome, it is necessary to have a second set of hands to help hold the extension in place and accurately mark the mounting holes. For the lone mechanic, it may be worthwhile to remove the fender from the motorcycle and install the fender extension with the fender on a workbench.

STEP 1 Place the bike on its center stand.

STEP 2 Place a small amount of mineral spirits on a cloth and clean the lower portion of the bike's front fender. Wipe dry with a clean cloth.

STEP 3 There are two raised bosses inside the fender extension to assist with alignment. Slide the extension up the fender until the ends of the raised bosses make contact with the lower edge of the fender. When you are satisfied with the positioning of the fender extension, hold it in place and mark the center of each mounting hole and the upper edge of the fender extension with the NON-PERMANENT fine point marker.

STEP 4 Remove the adhesive backing from the inside of the fender extension. Work slowly and precisely using the marks you made on the fender and the raised bosses inside the fender extension to guide the fender extension into place. Once properly located, hold it firmly for 30 seconds to ensure a good bond.

IMPORTANT

Before continuing with STEP 5, locate a block of wood to slide in between the fender and the tire to protect the tire while drilling the mounting holes.

STEP 5 Hold the fender extension tightly against the fender and verify the marks made in STEP 3 are still centered in the fender extension mounting holes. Remark if necessary. Drill a 1/8" pilot hole on each mark and then drill each to 3/8".

STEP 6 Insert a T-Nut in each mounting hole from inside the fender with the threaded boss facing out. Secure the extension to the fender with the supplied M6-1.00mm x 8mm Button Head Cap Screws.

Ride On!

7354-21GL-0504

E-MAIL
techsupport@kuryakyn.com
or call 715.247.2983


WARRANTY
Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.

CONSEQUENTIAL DAMAGES:
Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG
You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

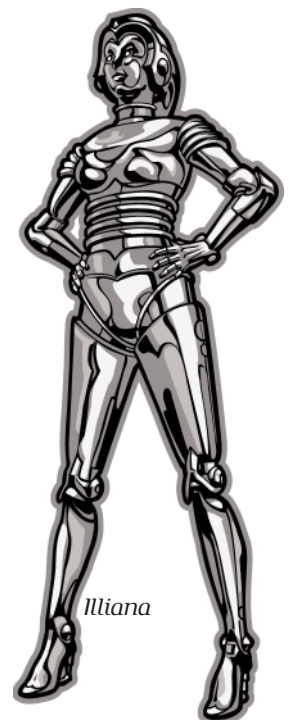

Illiana