



RING OF FIRE FOR GL1800

7392

Amber Outward Shining/Blue & Green Inward Shining

FITS: KÜRYAKYN AND HONDALINE ROTOR COVERS

PART#	INCLUDED
401146	2 Trim Rings for GL1800 – Chrome
401147	2 Adhesive Strips
600122	1 Amber/Blue/Green L.E.D. Assembly (pr)
907390W	1 Wire Kit includes the Following:
607312P	1 "Y" Adapter Plug
607303W	1 "Y" Wire Plug With Small Connectors
401630	3 3/8" Diameter Tubing
400815	8 4" Cable Ties
307392	1 Instruction Sheet

TOOLS SUGGESTED

Window cleaner and Clean paper towel, Wire cutter/Stripper, Splicing supplies

NOTE

When this kit is wired into the stock harness, the ring of fire lights will come on with the ignition key.

PROCEDURE AVERAGE TIME: 30 MINUTES

STEP 1 Using the window cleaner, thoroughly clean and dry the outer circumference of the chrome rotor cover.

STEP 2 Determine which is the left and right side Ring of Fire. (When installed on the bike, the wire leads will exit at the top of the ring.) Trial fit the ring on the rotor cover to determine your desired placement. You may wish to place a tape mark on the rotor cover for a reference point.

NOTE: The adhesive will really "grab" this chrome surface if it is installed dry. You may want to make a soapy water solution (about two drops of dish soap to a 8oz glass of water) and wet the surface of the rotor cover and adhesive just prior to installation. This will make it easier to position the ring on the rotor cover. If this technique is used, you MUST NOT drive the bike for 1-2 hours to allow complete evaporation of the soap solution. Failure to allow drying time will result in a Ring of Fire coming off and getting damaged.

STEP 3 Remove the adhesive backing and affix the Ring of Fire to the rotor covers. Apply moderate pressure to insure a good bond.

STEP 4 Slide the sections of shrink wrap onto the wire lead for each side. Plug the connector lead into each ring of fire lead. Mock up your wire routing at this time to be sure the wires can be run where you want them. (We suggest running them along and binding them to each brake line.)

-cont.-

E-MAIL

techsupport@kuryakyn.com or call 715.247.2983

WARRANTY

Kuryakyn™ warrants that any Kuryakyn product sold hereunder, if properly installed, maintained and operated under normal conditions, shall be free from any defects in materials and workmanship for a period of one (1) year from the date the Kuryakyn products are sold to the customer.


CONSEQUENTIAL DAMAGES: Kuryakyn shall not be liable for any consequential or incidental damages.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn™ product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2003 Kuryakyn USA™ All Rights reserved.

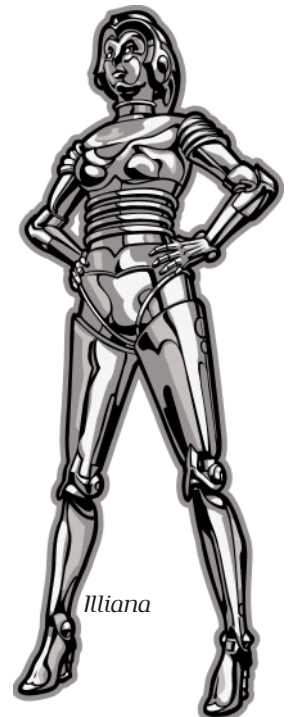

Illiana

STEP 5 Place the shrink tube over each plug connection, and apply moderate heat. This will "weatherproof" and secure the plugs together. Permanently route your wires and bind them in place using the enclosed cable ties.

STEP 6 Remove the left side fairing pocket. (Push in the center "button" of the stock snap fasteners and remove by pulling the snap fastener free of the fairing and pocket assembly.) Find the unused three slot "accessory lighter " plug and plug in the supplied "Y" connector harness. Insert the small black plug from the ring of fire extension leads to this Y connection. The one remaining plug will be used to connect other Küryakyn lighting accessories like the "Lighted Fender Trim"(available separately). If you choose to hard wire these lights into a remote switch (not included), the extension lead Black wire is ground, and the red wire is power. Replace the fairing pocket.

Ride on!

Küryakyn™

PAGE

2