



LIBERATOR PEGS WITH ADAPTERS 7526

FOR SUZUKI/HONDA FRONT PEG

FITS: HONDA CRUISERS: GL 1800

HONDA SPORT BIKE: '00-'08 CBR 600, '00-'01 CBR 929, '02-'03 CBR 954RR, '04-UP CBR 1000RR, '00-'03 CBR 1100XX, '00-UP VFR 800 INTERCEPTOR, '03-UP ST 1300, '00-'07 RC51

SUZUKI CRUISERS: '05-UP M50, '01-'04 VOLUSIA 800, '06-UP M109R & '09-UP M90

SUZUKI SPORT BIKES: '99-UP HAYABUSA (GSX1300R), '00-UP GSXR 600, '00-UP GSXR 750, '01-UP GSXR 1000, '00-UP SV 650 & SV 1000

CAN-AM : SPYDER

PARTS INCLUDED

- 2 Liberator Pegs
2 3/8-18 x 4.25 x 1.25 Socket Head Cap Screws
2 Peg Adaptors
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, foot pound (ft. lbs.) torque wrench.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

-cont.-



CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
The product must be properly installed, maintained and operated under normal conditions.
Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today-select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**STEP 2** Remove the existing foot pegs and foot peg mounting hardware from the motorcycle and set them aside. Save hardware and spring.


**NOTE:** Most applications will have an "E-clip" holding the mounting pin in place.

**STEP 3** Install the new foot peg adapter reusing original mounting hardware and spring.

**STEP 4** Install the left and right Liberator Pegs on the foot peg adapters on the motorcycle. Leave the foot peg adapter fasteners loose for now. See PIC. 1.

**NOTE:** The foot peg mount will positively engage the peg when tightened; determine the desired position before fully tightening.

**STEP 5** Adjust the angle of the Liberator Pegs then tighten the 3/8-18 x 4.25 x 1.25 Socket Head Cap Screw. Torque the Cap Screw to 12 ft. lbs.

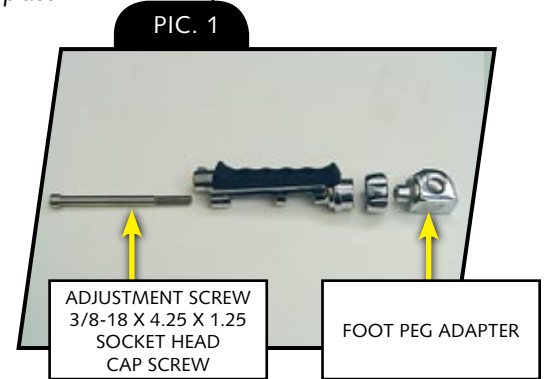

**CAUTION!** Torque the adjustment screw to 12 ft-lb. **DO NOT EXCEED 15 ft-lb!** Over-tightening the adjustment screw **WILL** damage the foot peg!

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

**CAUTION!** Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

**WARNING!** IMPROPER INSTALLATION OR USE OF THIS PRODUCT COULD RESULT IN SERIOUS INJURY OR DEATH.

**CAUTION!** Larger foot pegs may limit cornering clearance.

## Ride On!