



INSTALLATION

WHEEL SPOKE COVERS FOR GOLDWING 7569

FITS '01-UP GL1800 MODELS

PARTS INCLUDED

- 5 RH Cover Assembly
- 5 LH Cover Assembly
- 1 RH Alignment Tool
- 1 LH Alignment Tool
- 1 Clamp/Tie Kit, including:
- 20 Clamping Fixture
- 10 12" Nylon Cable Tie
- 8 0.75 x 0.22 x 0.030 Double-sided Removable Tape
- 10 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

TOOLS SUGGESTED

Allen wrenches

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

ATTENTION! Do not attempt to perform this procedure in temperatures cooler than 60°F/15°C. The adhesive may not fully adhere in cooler temperatures.

ATTENTION! The following photos show the wheel removed from the bike; however, you DO NOT need to remove the wheel to complete this installation.


PROCEDURE

STEP 1 Put the motorcycle on the center stand. We suggest removing the front fender, front fork cover, and rotor cover to make the spoke cover installation easier. You do not need to remove these components completely from the bike, only move them away from the front wheel. Refer to your factory service manual for specific steps.

STEP 2 Clean the rim thoroughly with soap and water to remove any grease or other debris. Use the provided alcohol pads to wipe the surfaces clean of any soap residue. Be sure the rim is clean and dry before proceeding.

ATTENTION! Be sure to remove any grease or debris that may prevent the adhesive from bonding. Kuryakyn **WILL NOT** warranty any parts lost due to improper or negligent installation procedures.

STEP 3 Remove the paper backing from the self-adhesive strips on the alignment tool. Place the alignment tool on the leading edge of one of the right wheel spokes. Press firmly to adhere. See PIC.1.

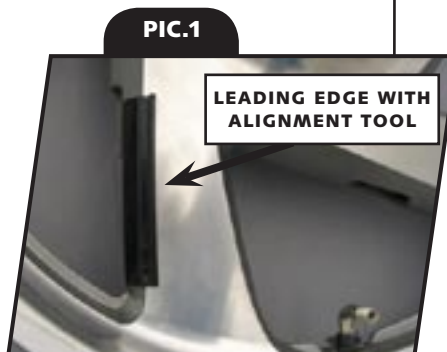

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



ATTENTION! There are specific alignment tools for the right and left sides; be sure to use the correct alignment tool otherwise the spoke covers will not fit properly.

STEP 4 Remove one of the right side spoke covers from the kit. Rub the paper backing on the self-adhesive strips with your fingernail to activate the adhesive compound.

ATTENTION! There are specific spoke covers for the right and left sides; be sure to use the correct spoke covers. If you are unsure as to which spoke cover to use, test fit the cover before removing the paper backing from the adhesive.

STEP 5 Note: The adhesive on the spoke covers is very sticky, we suggest you practice placing one of the covers before actually taking the paper backing off. The positioning and installation steps below are simply suggestions; you may find method that works easier for you.

STEP 6 Remove the paper backing from the self-adhesive strips and carefully position the edge of the spoke cover against the alignment tool. Check that the curved top edge of the spoke cover is correctly aligned with the curve of the rim, then press the spoke cover into place against the curve of the rim. See [PIC.2](#).

STEP 7 Smooth the cover along its length, being sure to keep the edge of the cover pressed against the alignment tool. See [PIC.3](#). Hold the spoke cover in place with light pressure for 1 minute to ensure proper adhesion.

STEP 8 Remove the alignment tool and rotate the wheel to access the next spoke. Repeat the installation steps above until all the right side spoke covers are installed. If necessary, remove and replace the self-adhesive strips on the alignment tool to ensure proper adhesion; extra self-adhesive strips are provided in the kit. See [PIC.4](#).


STEP 9 Repeat the installation procedure for the left side; be sure to use the left side alignment tool, replacing the self-adhesive strips as necessary to ensure proper adhesion.

STEP 10 After all the spoke covers are installed, thread two clamping fixtures onto a cable tie. See [PIC.5](#). Wrap the cable tie around the spoke, positioning a clamping fixture on both the left and right side covers. Tighten the cable tie, take care not to over-tighten or you could damage the chrome surfaces. Use two cable ties on each spoke, one close to the hub of the wheel and the other close to the outside of the rim. See [PIC.6](#).

STEP 11 Continue adding clamping fixtures and cable ties on all the spokes until each spoke is fitted with two cable ties. This will help adhere the spoke covers to the rim.

STEP 12 Allow the adhesive to cure for a full 24 hours then remove the cable ties and clamping fixtures. Reassemble any components removed from the front wheel.

CAUTION! WE RECOMMEND NOT RIDING THE BIKE WHILE THE COVERS ARE CURING OR WHILE THE CABLE TIES AND CLAMPING FIXTURES ARE INSTALLED.

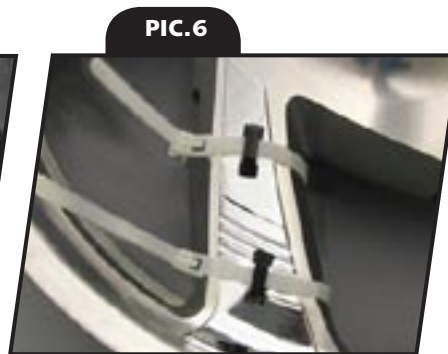

*Ride
On!*