



NECK COVERS 7834

FOR '08-UP TOURING

FITS: '08-UP DRESSERS, ROAD KING, ROAD GLIDE & STREET GLIDE WITH OR WITHOUT ABS

PARTS INCLUDED

- 1 Left Side Neck Cover
1 Right Side Neck Cover
2 Neck Cover Clamps
2 Down Tube Covers
1 Hardware Kit Including:
4 .375 x 1.5 x 1" Black Foam with Adhesive
4 .75 x 1.5 x .1" Black Foam with Adhesive
1 Alcohol Pad
4 8-32 x " Socket Head Cap Screws (SHCS)
2 5/16 Flat Washers
2 5/16-18 x 1-1/4" Button Socket Cap Screws (BSCS)
1 10-32 x 5/8" Socket Head Cap Screws (SHCS)
3 8" Cable Ties
1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of hex wrenches, combination wrenches, socket set and ratchet.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

-cont.-



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today--select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Cut the zip tie that secures the clutch cable to the downtube.

CAUTION! Avoid damage to the motorcycle. Protect painted surfaces with a soft cloth or blanket.

STEP 3 Remove the wire loom and the gas tank bolt from the right side of the neck as shown in [PIC. 1](#).

STEP 4 Remove the wire loom and gas tank bolt from the left side of the neck as shown in [PIC. 2](#); then remove the air temp sensor by gently wiggling it back and forth.

STEP 5 Remove the rubber sleeves from the gas tank mounting tabs on both sides of the tank.

STEP 6 Remove the reflectors from the down tubes, by moving them back and forth (they are held in place with double-sided adhesive).

STEP 7 Snap the down tube covers into place; position them just below the weld line on the down tube.

STEP 8 Install the smaller foam pads from the hardware kit on the inside of the clamp halves and the inside of the covers as shown in [PIC. 3](#).

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50° F. Do not attempt this installation in temperatures less than 50° F.

STEP 9 Place the left cover on the motorcycle, and start a 5/16-18 x 1-1/4" BSCS screw and flat washer to secure the cover and the tank to the frame.

STEP 10 Start the two 8-32 x1/2" SHCS screws that secure the clamps to the cover as shown in [PIC. 4](#).

STEP 11 Place the right cover on the motorcycle, and start a 5/16-18 x 1-1/4" BSCS screw and flat washer to secure the cover and the tank to the frame.

STEP 12 Start the two 8-32 x1/2" SHCS screws that secure the clamps to the cover as shown in [PIC. 4](#).

STEP 13 Start the 10-32 x 5/8" that secures the top of the neck covers together as shown in [PIC. 5](#).


STEP 14 Ensure that the wires are in the recessed area of the neck covers.

ATTENTION! Secure all wiring away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT warranty any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.


STEP 15 On the left side of the neck, secure the clutch cable to the wiring harness with an included cable tie so that the clutch cable is under the very front of the cover as shown in [PIC. 6](#). Note On Road Kings STEP 15 is not performed because the clutch cable runs along the forks.

Küryakyn[®]

PIC. 1

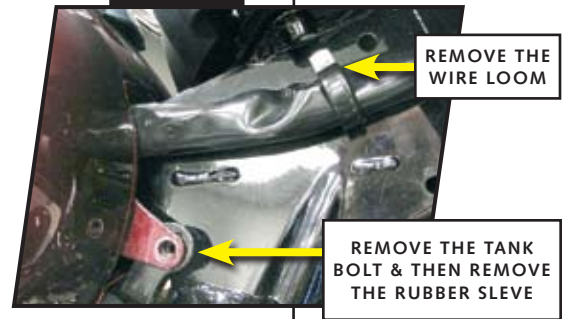

PIC. 2

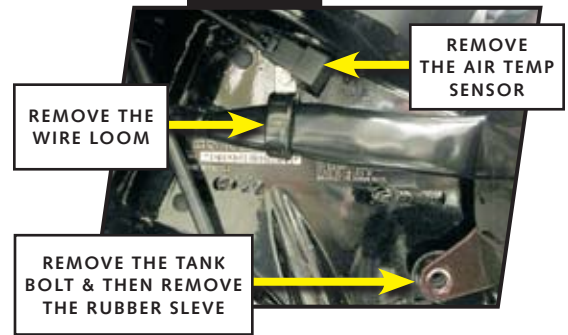

PIC. 3



PIC. 4



PAGE

2

-cont.-

STEP 16 Secure the temperature sensor that was removed in STEP 4 out of the way of any moving parts using an included cable tie.

STEP 17 Tighten the 10-32 x 5/8" screw that secures the top of the covers together.

STEP 18 Tighten the screws from STEP 10 and STEP 12 that secure the clamps to the covers.

STEP 19 Tighten the 5/16-18 x 1-1/4" screws that secure the covers and the tank.

STEP 20 Secure the clutch cable to the down tube in the same location that the cable tie that was removed in STEP 2 was located.

STEP 21 Slide the rubber stops on the forks as far down as they will go.

NOTE: STEP 22 THROUGH STEP 28 ARE NOT NECESSARY FOR ROAD KING MODELS.

STEP 22 Clean the forks above the rubber stops with the included alcohol-cleaning pad and allow the area to dry.

STEP 23 Using the back of your fingernail, rub the adhesive backing on two of the foam pads to activate the catalyst.

NOTE: The additional foam pads are included in the hardware kit in case there are any other points of contact between the forks and neck cover when the handlebars are turned to their full stopping position.

STEP 24 Remove the adhesive backing, and place a foam pad on the right fork in the approximate location as shown in PIC. 7.

STEP 25 Remove the adhesive backing, and place a foam pad on the left fork in the approximate location as shown in PIC. 8.

NOTE: Due to variations from motorcycle to motorcycle, some motorcycles may require a little extra pressure to engage the fork lock.

ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.


STEP 26 Turn handlebars in both directions to their full stop position to make sure that the clutch cable is not stretched or pinched.

WARNING! ENSURE THAT THE CLUTCH CABLE IS NOT PINCHED OR STRETCHED AT ANY POINT WHEN THE HANDLEBARS ARE TURNED TO THEIR FULL STOP POSITION ON EITHER SIDE. STRETCHED OR PINCHED CABLES CAN CAUSE LOSS OF CONTROL THAT COULD RESULT IN SEVERE INJURY OR DEATH.


PIC. 5




PIC. 6

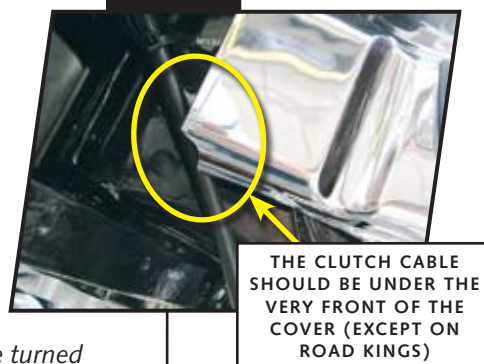

PIC. 7

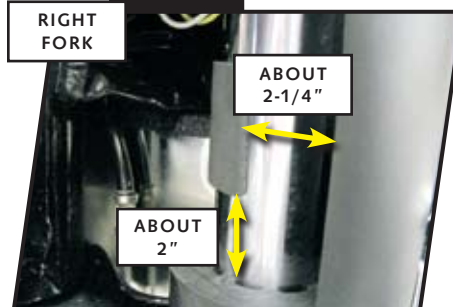

PIC. 8

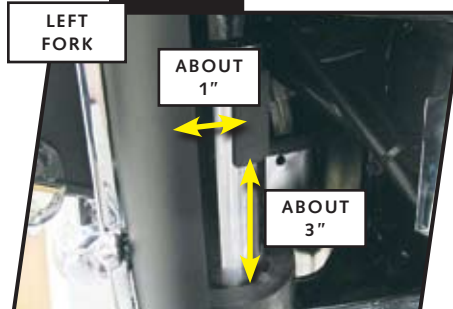

Ride On!