



SWINGARM COVER 8287

FITS: ALL HONDA VTX MODELS

PART #	INCLUDED
408287R	1 Swing Arm Cover Right Rear
408287F	1 Swing Arm Cover Right Front
908287	1 Hardware Kit Including: 2 M6 x 1.0 x 16mm Flange HHCS 3 Adhesive pads 1 Alcohol Pad 1 Hot Spot
308287	1 Installation Instructions

THANK YOU FOR CHOOSING KÜRYAKYN!

Please read and understand entire instructions before starting installation.

PLEASE NOTE

It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.


ATTENTION! Check for proper clearance between the exhaust and swingarm cover — you may need to shim out the exhaust for proper clearance.

PROCEDURE

STEP 1 Remove the two screws on the right swing arm that secure the brake line. See PIC.1. Some models may have one screw. These screws will not be reused.

STEP 2 Remove the right rear bottom shock bolt. The shock will not fall off the mounting stud. See PIC.2.

STEP 3 Models that use one screw to secure the brake line will have an empty hole in the cover. Install the included Hot Spot to the unused hole. See PIC.2A and PIC.2B. Insert the Hot Spot from the outside then bend the tabs over. Place a small amount of adhesive pad over the bent over tabs to prevent any possibility of scratching the swing arm.

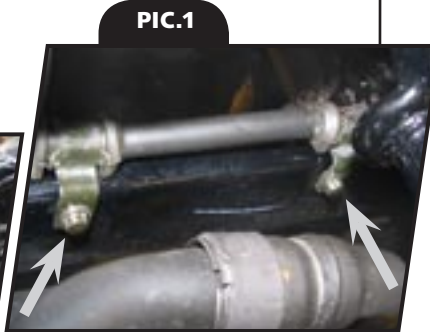

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 4 Clean the covers with the alcohol pad for the adhesive pads to adhere to. See [PIC.3A](#) and [PIC.3B](#) for the proper placement of these pads. Please do not try and remove the outer covering on the pads. These pads are meant to be one sided adhesive pads.

STEP 5 Slide the front cover (in from the rear) into place and secure the cover and the brake line brackets with the 2 supplied fasteners. On some models you will have one screw to secure this front cover. See [PIC.4](#).

STEP 6 The rear cover will also need to be slid in from the rear of the bike. This cover has a tab that must be under the swing arm when you are getting it into position.

STEP 7 Thread in the stock OEM bolt and washer back into the shock mount. This bolt must be torqued to 20 ft. lbs.

Ride On!

PIC.3A



PIC.3B



PIC.4

