



CHROME DUST COVERS 8636

FOR GL 1800

FITS: '01-UP GL 1800 MODELS WITH KÜRYAKYN FORK BRACE (P/N 8615) ONLY

PARTS INCLUDED

- 1 Right Side Fork Brace Cover
- 1 Left Side Fork Brace Cover
- 2 Lower Filler Fork Brace Covers
- 2 Alcohol Pads
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED


Warm soapy water and a clean rag.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

PROCEDURE

- STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.
- STEP 2** Clean the forks, and brace with warm soapy water and a clean rag, rinse, and allow them to dry.
- STEP 3** Clean the front of the fork brace and the forks below the brace with the included alcohol pads and let them dry.
- STEP 4** Refer to PIC. 1, and determine the left and right upper covers.

-cont.-

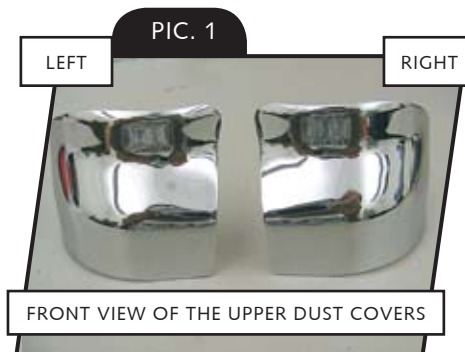

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today--select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



STEP 5 Test fit the upper right cover; the inside edge of the cover will be located near the edge of the screw on the top of the brace. See PIC. 2. Ensure the contour along the bottom of the cover follows the contour line on the front of the brace as highlighted in PIC. 2.

NOTE: Make sure that there is clearance between the fork and the cover.

STEP 6 Using the back of your fingernail, rub the adhesive backing on the bottom of the contour to activate the catalyst.

ATTENTION! Ensure the area of installation is free of grease, oil, dirt or other debris to ensure proper adhesion. Küryakyn WILL NOT warranty any parts lost due to improper installation.

ATTENTION! The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 7 Remove the backing, and place the cover on the fork brace, press and hold in place for one (1) minute full bonding strength will occur in 24 hours.

STEP 8 Repeat STEP 3 through STEP 7 for the left side.


STEP 9 Clean the front of the fork brace and the forks below the brace with the included alcohol pads and let them dry.

STEP 10 Using the back of your fingernail, rub the adhesive backing on the backside of the lower cover to activate the catalyst.

STEP 11 Remove the backing, press and hold the lower cover in place for one (1) minute, full bonding strength will occur in 24 hours.

STEP 12 Repeat STEP 9 through STEP 11 for the left side.

CAUTION! Periodic maintenance and review is suggested to ensure that clearance is maintained between the covers and the forks.

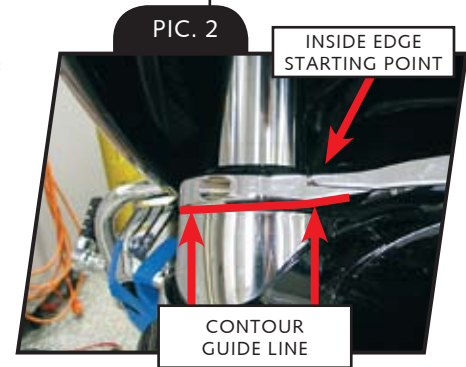

Ride On!