



## FRONT SPLINED ADAPTERS 8827

### FOR YAMAHA SPORT BIKES

**FITS: ALL '99-UP YZF R-6/600R, '00-UP R-1/1000R, AND '01-UP FZ-1/1000 (F/PEGS REQUIRE SPLINED ADAPTERS)**

#### PARTS INCLUDED

- 2 Cogged Face Adapters
- 1 Hardware Kit. Including:
  - 2 1/4-20 x 3/8 Set Screws
  - 2 3/8 Wave Washers
  - 2 5/16-18 x 1 1/2 Button Head Cap Screws
  - 2 5/16-18 Nylon Insert Nuts
- 1 Installation Instructions

*Please read and understand entire instructions before starting installation.*

#### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**CAUTION!** This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

**ATTENTION!** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

#### TOOLS SUGGESTED

Set of hex wrenches, combination wrenches, locking pliers, drill, 1/4" drill bit, safety glasses.

**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

#### PROCEDURE

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.


**CAUTION!** Larger footpegs may limit cornering clearance.

**STEP 2** Locate the area of the peg that needs to be drilled. (See PIC. 1)

**STEP 3** Wearing your safety glasses, use the drill and 1/4" drill bit to drill the rivet head off. (See PIC. 2)

**NOTE:** You may need to hold the top side of the rivet with locking pliers to prevent the rivet from spinning.

-cont.-

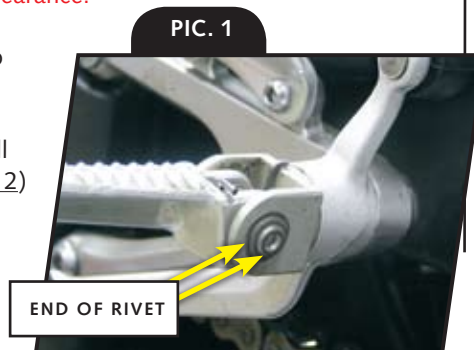

#### CUSTOMER SERVICE

877.370.3604 (toll free)

#### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

#### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in non-conforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



**STEP 4** With the rivet drilled out, remove the pin and slide the peg out of the adapter. None of the stock hardware will be reused.

**STEP 5** Install the new Splined Peg Adapter with the provided hardware. Refer to PIC. 3 for order of hardware.


**STEP 6** When you have the adapter tight, you can set the height of the peg by tightening or loosening the setscrew.

**ATTENTION!** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

PIC. 2



PIC. 3

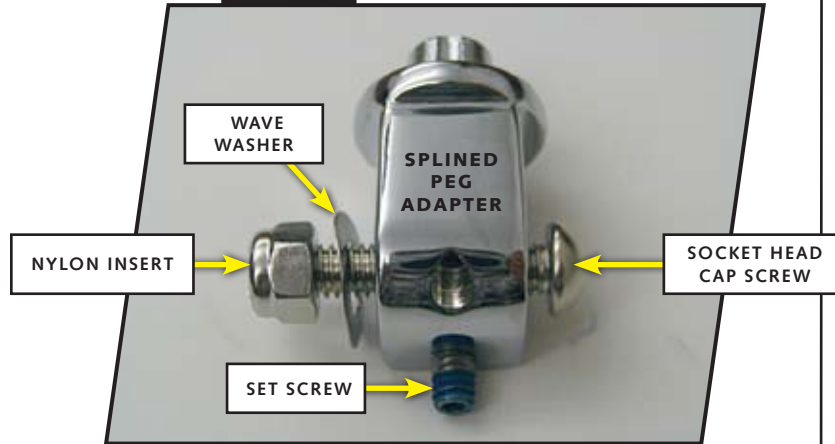

*Ride On!*