



PASSENGER ARMREST 8989

FITS: '98-UP FLHTCU AND FLHTC IF EQUIPPED WITH REAR SPEAKERS

PARTS INCLUDED

- 1 Left Armrest Assembly
- 1 Right Armrest Assembly
- 1 Left Mount Bracket
- 1 Right Mount Bracket
- 1 Left Armrest Pad Assembly
- 1 Right Armrest Pad Assembly
- 1 Kuryakyn Can Cooler
- 1 Hardware Kit, including:
 - 4 Fender Washers
 - 4 5/16"-18 x 1" Socket Head Cap Screws (SHCS)
 - 4 5/16"-18 x 2-5/8" Button Head Cap Screws (BHCS)
 - 2 5/16-18 x 3" BSCS (Used only with Küuryakyn Relocator Kit, P/N 1527)
 - 2 5/16"-18 Nylon Insert Nuts
 - 2 1/4"-20 x 1/2" Button Head Cap Screws
 - 2 1/4" Nylon Washers
- 1 Cord Bracket Kit, including:
 - 1 Re-locator Bracket
 - 3 #10-32 x 7/16" Button Head Cap Screws
 - 3 #10-32 Nuts
 - 3 #10-32 Lock Washers
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

WARNING! DO NOT OPERATE THE MOTORCYCLE WITH THE PASSENGER ARMRESTS FOLDED OUTWARDS.

CAUTION! THIS PRODUCT WAS DESIGNED FOR USE AS A PASSENGER ARMREST ONLY; USE ONLY AS INTENDED.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

ATTENTION! This procedure requires making permanent modifications to the Tour Pak™; this may void your warranty. Consult your dealer for more information.

ATTENTION! It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

-cont.-

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



TOOLS SUGGESTED

Set of hex wrenches, set of combination wrenches or socket set, Torx bit set, drill and 11/32" drill bit.

PROCEDURE

STEP 1 Open up the top trunk and locate the two acorn nuts inside the Tour Pak™ pouch; remove the nuts and the washers and set aside for now, they will be re-used later. See [PIC.1](#).

STEP 2 Remove the pouch and the Tour Pak™ liner and set aside.

STEP 3 Remove the stock rear bolts, washers, spacers and nuts shown in [PIC.2](#) and [PIC.3](#). Only the spacer will be re-used.


STEP 4 Enlarge the two rear holes to 11/32"; the hole needs to be drilled all the way through the Tour Pak™ support.

STEP 5 On the right side, remove the front fastening hardware; set the hardware aside, only the spacer will be re-used.

STEP 6 Secure the right Passenger Armrest Mount to the Tour Pak™ support with two of the included 5/16"-18 x 2-5/8" BHCS, fender washers and one nylon insert nut as shown in [FIG.1](#). Leave the hardware loose for now. If Küryakyn P/N 1527 has been installed, you will need to use the two included 5/16"-18 x 3" BSCS in holes from [STEP 4](#).

NOTE The front fastener threads directly into the armrest mount.

STEP 7 Repeat [STEP 4](#) through [STEP 5](#) for the other side.

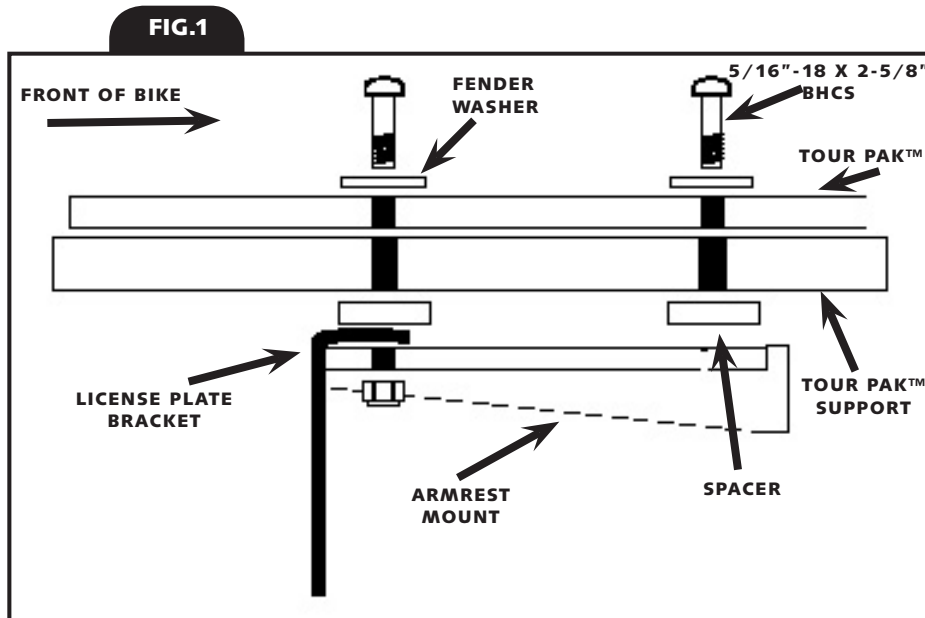

STEP 8 Tighten all the hardware.

STEP 9 Reinstall the Tour Pak™ liner, pouch and acorn nuts with washers.

INSTALL THE ARMREST ASSEMBLIES

STEP 1 Secure the armrest assemblies to the armrest mount with the included 5/16"-18 x 1" Socket Head Cap Screws. See [PIC.4](#). Fully tighten the fasteners.

-cont.-

Küryakyn

PIC.1




PIC.2



PIC.3



PIC.4

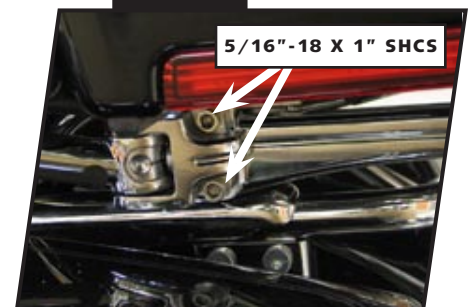

PAGE
2

PASSENGER ARMREST INSTALLATION

INSTALL THE ARMREST PAD ASSEMBLIES

STEP 1 Assemble the armrest pad and arm (See [PIC.5](#)); secure with the 1/4"-20 x 1/2" BHCS and 1/4" nylon washer.

NOTE There are two possible mounting heights for the armrest pad. Choose which height will provide the most comfort, install the 1/4-20 screw and tighten.

STEP 2 Ensure that all fasteners are properly tightened before operating the motorcycle.

INSTALL THE INTERCOM CORD RE-LOCATOR (IF SO EQUIPPED)

STEP 1 Remove the four Torx screws securing the speaker cover; set them aside.

STEP 2 Carefully remove the speaker from its mount; let it sit on the passenger seat for now.

STEP 3 Remove the intercom cord from the clamp and let it hang.

STEP 4 Remove the stock screw and nut from the intercom cord clamp; set the clamp aside, it will be re-used.

STEP 5 Position the new cord re-locator as shown in [PIC.6](#).

STEP 6 Insert two #10-32 x 7/16" BHCS through the bottom side of the re-locator into the speaker compartment and secure with lock washers and nuts.


STEP 7 Slide the stock intercom clamp into the re-locator (plastic hook first) and secure with a #10-32 BHCS, lock washer and nut. See [PIC.7](#). Tighten the nut.

STEP 8 Reinstall the intercom cord in the clamp.

STEP 9 Reinstall the speaker, cover and Torx screws.

CHOOSE WHICH MOUNTING LOCATION IS COMFORTABLE FOR YOU AND TIGHTEN THE FASTENER

PIC.5

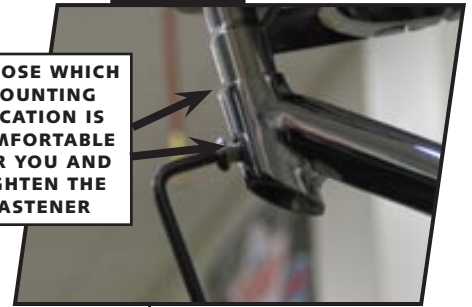

PIC.6



PIC.7



Ride On!