



3-1/2" EZ CHOCK 935

FITS: DIRT BIKES OR CRUISERS WITH NARROW FRONT TIRES

PARTS INCLUDED

- 1 3-1/2" EZ Chock
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

GUIDELINES FOR USING EZ CHOCK USING CHOCK IN MIDDLE OF TRANSPORT PLATFORM

STEP 1 Read and understand all steps in the instructions before using this product.

STEP 2 Set the chock in place.


STEP 3 Place one end of the security straps in the lower holes (see PIC.1) of the chock, and the other ends of the security strap to a location behind the chock.

STEP 4 Put the bike wheel in the chock and strap the bike to a forward location.

STEP 5 The top holes of the chock (see PIC.1) may be used to place strap over the top of the tire as an additional securing measure.

STEP 6 Additional straps can be added to the rear of the motorcycle for additional stability. Ensure any additional straps also pull the motorcycle in a forward direction.

CAUTION! Avoid damage to the motorcycle. Ensure that the strap will not rub on any components of the motorcycle.

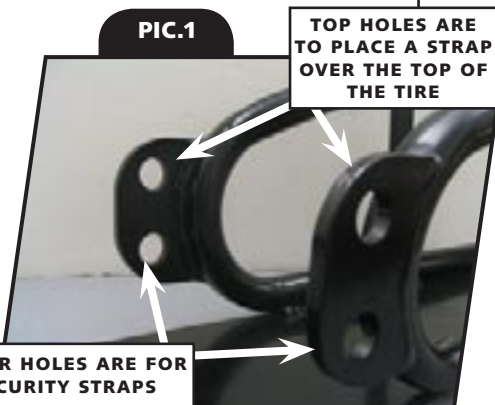

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



USING CHOCK AGAINST A FIXED LOCATION

STEP 1 Place the front of the chock against a fixed location (i.e. front of truck bed or wall of trailer).

STEP 2 Put the bike wheel in the chock and strap the bike to a forward location.


STEP 3 The top holes of the chock (see [PIC.1](#)) may be used to place strap over the top of the tire as an additional securing measure.

STEP 4 Additional straps can be added to the rear of the motorcycle for additional stability. Ensure any additional straps also pull the motorcycle in a forward direction.

WARNING! **THE EZ CHOCK IS NOT DESIGNED TO BE A STAND.** IT IS THE USERS RESPONSIBILITY TO ENSURE THAT THE MOTORCYCLE IS PROPERLY SECURED TO THE TRANSPORT VEHICLE OR TRAILER **USING AN ADEQUATE NUMBER OF STRAPS.** DEPENDING ON THE MOTORCYCLE, ADDITIONAL STRAPS NOT MENTIONED ABOVE MAY BE NECESSARY. KURYAKYN WILL NOT BE HELD RESPONSIBLE FOR ANY DAMAGE INCURRED BY FAILURE TO PROPERLY SECURE THE MOTORCYCLE TO THE TRANSPORT PLATFORM..

Ride On!

EZ CHOCK IN MIDDLE OF TRANSPORT PLATFORM

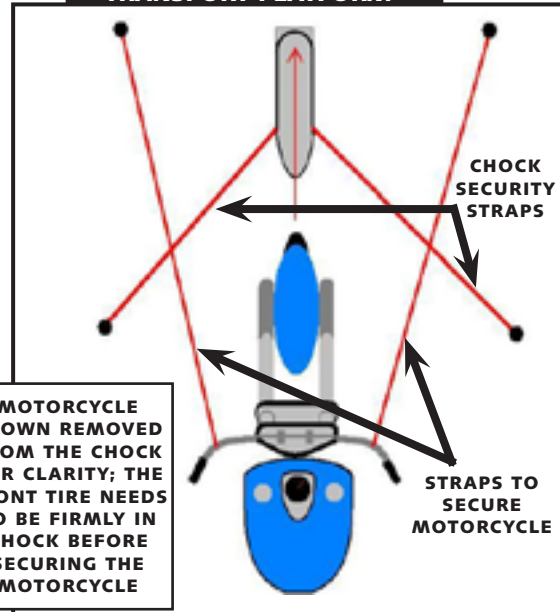

EZ CHOCK AGAINST A FIXED LOCATION

