



LOWER FRONT FRAME COVER

7897

FITS: '91-UP TOURING MODELS WITHOUT FAIRING LOWERS (DRESSERS, ROAD KINGS, ROAD GLIDE, STREET GLIDE)

PARTS INCLUDED

- 1 Lower Front Frame Cover
- 1 Hardware kit, including:
 - 1 Clamp
 - 2 10-24 x 1/2 Button Socket Cap Screw (BSCS)
 - 1 10-24 x 3/8 Set Screw
 - 1 Adhesive Tape
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

ATTENTION! It is the installer's responsibility to ensure all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

TOOLS SUGGESTED

Set of hex wrenches, alcohol wipe

PROCEDURE

STEP 1 Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

STEP 2 Screw the included setscrew into the clamp. Thread the setscrew in until it just protrudes from the inside of the clamp. See PIC.1.

STEP 3 Clean the inside of the clamp and mounting position with an alcohol pad and allow them to dry completely.

STEP 4 Rub one side of the adhesive tape backing to activate the adhesive; remove the backing.

STEP 5 Press the adhesive tape into the inside of the clamp. Hold in place for at least 60 seconds for the best adhesion. See PIC.2.

STEP 6 Rub the other side of the adhesive backing.

-cont.-

PIC.1



PIC.2



CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



STEP 7 Loosely secure the front of the clamp to the Lower Frame Cover with a 10-24 x 1/2 (BSCS); leave the screw loose for now. See [PIC.3](#).

STEP 8 Maneuver the cover into place; remove the adhesive backing and flip the clamp around the down tube.

STEP 9 Secure the rear side of the clamp to the cover with a 10-24 x 1/2 (BSCS); leave the screw loose for now.

STEP 10 Rotate the cover counter clockwise until it contacts and then move it back clockwise an 1/4 inch. Press the clamp onto the down tube for at least 60 seconds for the best adhesion.

NOTE Ensure that the cover has 1/4 inch clearance of the engine. See [PIC.4](#).

STEP 11 Tighten the front 10-24 screw first; tighten the rear 10-24 screw second.


NOTE Adjust the setscrew in the clamp to remove any freeplay in the cover.

STEP 12 Ensure the proper clearance and operation of moving parts and the motorcycle before riding.


Ride On!

Kuryakyn

PIC.3

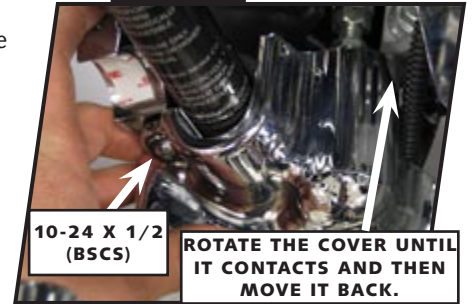

PIC.4

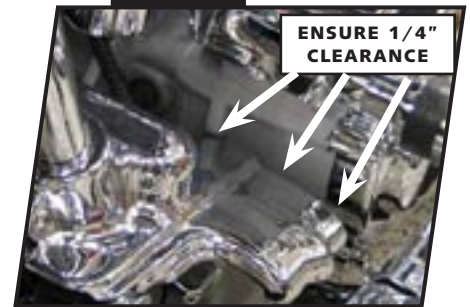

PAGE

2

LOWER FRONT FRAME COVER

INSTALLATION