



# INSTALLATION



## LIGHTED SIDE MOUNT LICENSE PLATE HOLDER 9007

THE LIGHTED SIDE MOUNT LICENSE PLATE HOLDER IS COMPATIBLE WITH ANY MODEL BUT YOU MUST ORDER THE CORRECT SPLINED MOUNT TO MEET YOUR SPECIFIC NEEDS (SOLD SEPARATELY).

PART #	INCLUDED
609005	1 Vertical Curved License Plate Assembly with LEDs
909159	1 Wiring Kit, including:
	4 T-Tap Female Quick Slide Scotch-Lok Connectors
	4 Male #ET15534 Scotch-Lok Connectors
	4 Cable Ties
	1 Dielectric Grease
	1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**ATTENTION!** Your local ordinances may have specific requirements on the approved angle of the plate mount. Be sure the license plate is at the approved angle and meets all local ordinances.

**ATTENTION!** The brake light on the license plate holder is not intended to function as the main brake light, it is meant only to be an accent accessory. Be sure your main brake light is functional before operating your motorcycle.

**NOTE** It is the installers' responsibility to make sure all fasteners (including pre-assembled) are tightened before operation of motorcycle. Kuryakyn will not warranty components that are lost due to improper installation. Periodic maintenance may be required.

### TOOLS SUGGESTED

Torque wrench (ft/lbs), open-end wrenches, Allen wrenches.

### PROCEDURE

**NOTE** This procedure assumes that you have already installed the appropriate splined adapter for your specific application.

**STEP 1** Remove the four Allen screws from the back of the license plate assembly. Install your license plate into the assembly and fasten the Allen screws. You may need to trim your plate with tin snips for a perfect fit.

**STEP 2** Install the correct splined mount for your specific application (sold separately); refer to the installation instructions supplied with the splined adapter.

**STEP 3** Place the splined section of the license plate assembly over the splined adapter; adjust the angle of the license plate assembly and secure with the fastener that was supplied with the splined adapter. Be sure the plate assembly does not interfere with the shock absorber or other neighboring components and that there is sufficient clearance for the passenger foot peg. Torque the fastener to 20 ft/lbs., ensuring that the cogs mesh properly.

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.




**STEP 4** STEP 4. Locate the main wiring harness running to the rear fender. Use a test light, or refer to the factory service manual to identify which wires perform the run and brake function of the taillight.

**STEP 5** Route the plate assembly wiring harness to the stock wiring harness. Keep the wiring harness clear of moving parts and high temperature parts (belt, wheel, swing arm pivot, etc.).

**WARNING! SHOCK HAZARD!** Disconnect the battery cables before splicing wires.

**STEP 6** Refer to FIG.1 below to make the correct electrical connections. Male and female connectors are supplied with the installation kit; be sure to use dielectric grease between the connectors.

FIG.1

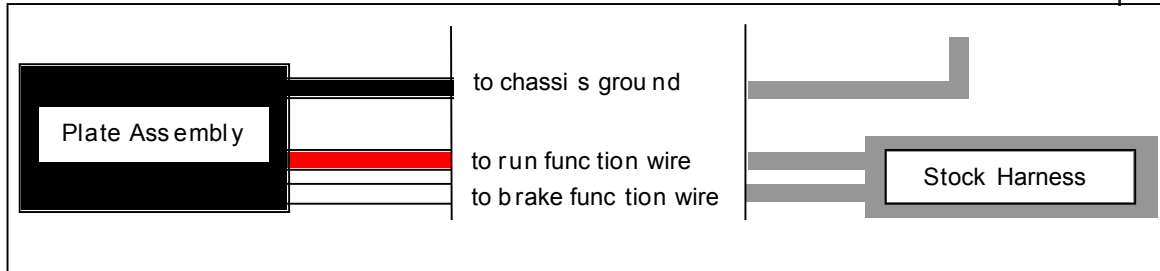

**STEP 7** Secure the plate assembly wiring harness using the supplied cable ties. Reconnect the battery cables and test the license plate assembly for proper function.

*Ride On!*